

Superior “Safe”



Impostazioni di fabbrica:

Codice TV: 0181

Codice SAT: 1914

Factory Settings:

TV Code: 0181

SAT Code: 1914

IT

Codici suggeriti per le marche TV più diffuse:

HISENSE	LG	PANASONIC	PHILIPS (Code A)	PHILIPS (Code B)	SAMSUNG	SONY	TELEFUNKEN / VESTEL
4291	4231	4281	4261	4271	4241	4251	4261

RICERCA RAPIDA PER MARCA:

	1	2	3	4	5	6	7	8	9	0
TV	Hitachi	JVC	LG	Panasonic	Philips	Pioneer	Samsung	Sharp	Sony	Toshiba
SAT	CanalSat	Digital	Foxtel	Humax	MultiChoice	Philips	Pioneer	SKY	TechniSat	Sky Deutschland

- 1) Posizionarsi con il telecomando davanti all'apparecchio che si vuole controllare verificando che sia acceso.
- 2) Tenere premuti il tasto del banco di memoria ("TV" o "SAT") e "MENU" finché il LED si accenda (circa 3 secondi).
- 3) Premere la sequenza di tasti numerici "9-9-8- (0-9) " (l'ultima cifra deve essere scelta dalla tabella iniziale, in base al dispositivo ed alla marca cercata).
Verrà inviato ciclicamente un segnale per spegnere il dispositivo intervallato da un lampeggio del LED.
- 4) Quando il dispositivo si spegnerà, premere il tasto "OK" per confermare il codice ed interrompere la ricerca.
- 5) Verificare che il telecomando funzioni regolarmente, altrimenti ripetere la procedura dal punto 2.

RICERCA RAPIDA:

Cercare il codice di programmazione per il proprio dispositivo dalla lista alla fine di questo manuale prima di procedere con il primo passaggio.

- 1) Posizionarsi con il telecomando davanti all'apparecchio che si vuole controllare verificando che sia acceso.
- 2) Tenere premuti il tasto del banco di memoria ("TV" o "SAT") e "MENU" finché il LED si accenda (circa 3 secondi) per entrare in modalità di inserimento codice.
- 3) Inserire il codice a 4 cifre scelto.
- 4) Il LED si spegnerà a conferma dell'avvenuta programmazione. Nel caso in cui la procedura non sia andata a buon fine, il LED emetterà 2 lampeggi brevi e resterà acceso.
In questo caso, ripetere le operazioni a partire dal punto 3.
- 5) Verificare che il telecomando funzioni regolarmente, altrimenti ripetere la procedura dal punto 3, inserendo un codice diverso.

NOTA: Il telecomando uscirà automaticamente dalla modalità di programmazione dopo circa 15 secondi se non dovesse essere premuto alcun tasto.

RICERCA AUTOMATICA:

ATTENZIONE: Da utilizzare solo se non sia stato possibile trovare il codice specifico tramite le due ricerche rapide.

- 1) Posizionarsi con il telecomando davanti all'apparecchio che si vuole controllare verificando che sia acceso.
- 2) Tenere premuti il tasto del banco di memoria ("TV" o "SAT") e "MENU" finché il LED si accenda (circa 3 secondi).
- 3) Premere il tasto di accensione/spegnimento per avviare la ricerca automatica del codice. Verrà inviato ciclicamente un segnale per spegnere il dispositivo intervallato da due lampeggi del LED.
NOTA: Per tornare ad un codice precedente, si potrà cambiare il verso della ricerca premendo il tasto "CH◀".
Per riprendere il verso crescente, premere il tasto "CH▶".
- 4) Quando il dispositivo si spegnerà, premere il tasto "OK" per confermare il codice ed interrompere la ricerca.
- 5) Verificare che il telecomando funzioni regolarmente, altrimenti ripetere la procedura dal punto 2.

VISUALIZZAZIONE DEL CODICE IN USO:

- 1) Selezionare il banco di memoria di cui si desidera conoscere il codice ("TV" o "SAT").
- 2) Premere le combinazioni di tasti seguenti per scoprire ciascuna delle 4 cifre che compongono il codice cercato (si consiglia di annotare la cifra alla fine di ogni passaggio):

NOTA: La cifra "0" verrà indicata da una serie di lampeggi molto rapida.

- | | | |
|---------------------|---|--|
| a. "▶ (PLAY)" + "1" | → | Il numero di lampeggi del LED indica la 1° cifra del codice. |
| b. "▶ (PLAY)" + "2" | → | Il numero di lampeggi del LED indica la 2° cifra del codice. |
| c. "▶ (PLAY)" + "3" | → | Il numero di lampeggi del LED indica la 3° cifra del codice. |
| d. "▶ (PLAY)" + "4" | → | Il numero di lampeggi del LED indica la 4° cifra del codice. |

CONDIVISIONE TASTI "VOLUME" ("VOL-/VOL+/MUTE"):

Questa funzione permette di condividere i tasti "VOL-/VOL+/MUTE" del banco di memoria "TV" con il banco di memoria "SAT", sovrascrivendo gli stessi tasti di quest'ultimo.

Ciò permetterà di comandare i tasti "VOLUME" della TV anche quando è selezionato il codice "SAT".

- 1) Tenere premuti i tasti "SAT" e "MENU" finché il LED si accenda (circa 3 secondi).
- 2) Premere la sequenza di tasti numerici "9-1-0-0". Il LED lampeggerà due volte a conferma e resterà acceso.
- 3) Premere il tasto "TV". Il LED lampeggerà due volte e si spegnerà a conferma del completamento della procedura.

Per interrompere la condivisione dei tasti "VOLUME":

- 1) Tenere premuti i tasti "SAT" e "MENU" finché il LED si accenda (circa 3 secondi).
- 2) Premere la sequenza di tasti numerici "9-1-1-0". Il LED lampeggerà due volte e si spegnerà a conferma del completamento della procedura.

BLOCCO CODICE:

Per impedire che il codice programmato possa essere modificato, selezionare il banco di memoria desiderato ("TV" o "SAT") e, successivamente, tenere premuto il tasto "OK" per circa 7 secondi. Il LED lampeggerà due volte e si spegnerà a conferma del completamento della procedura.

Per sbloccare il codice:

Selezionare il banco di memoria desiderato ("TV" o "SAT") e, successivamente, tenere premuto il tasto "INFO" per circa 7 secondi. Il LED lampeggerà tre volte e si spegnerà a conferma del completamento della procedura.

FUNZIONE DI AUTOAPPRENDIMENTO:

- 1) Posizionare il telecomando originale ed il Superior "Safe" ad una distanza di 3-5 cm con i LED ad infrarossi l'uno di fronte all'altro.
- 2) Selezionare il banco di memoria ("TV" o "SAT") sul quale si desidera utilizzare la funzione. Tenere premuto il tasto nascosto sopra "INFO" finché il LED si accenda (circa 3 secondi), per attivare la modalità di autoapprendimento.
- 3) Premere il tasto del telecomando originale che si desidera apprendere. Il LED del Superior "Safe" comincerà a lampeggiare lentamente.
- 4) Premere il tasto del Superior "Safe" sul quale si desidera memorizzare quello del telecomando originale. Il LED del Superior "Safe" si accenderà nuovamente a conferma.
- 5) Ripetere i punti 3-4 per ogni ulteriore tasto da apprendere.
NOTA: Ogni tasto appreso, se necessario, potrà essere direttamente sovrascritto.
- 6) Premere nuovamente il tasto nascosto per uscire dalla modalità di autoapprendimento.

NOTA: Se durante l'apprendimento il LED del Superior "Safe" dovesse lampeggiare due volte, uscendo in modo inaspettato dalla procedura, potrebbe essersi verificato un problema di memoria/compatibilità con l'originale.

Potrebbe essere necessario eliminare alcuni tasti memorizzati su uno dei due banchi di memoria ("TV" o "SAT") per poter proseguire.

Eliminare un tasto memorizzato:

- 1) Tenere premuti il tasto del banco di memoria ("TV" o "SAT") e "MENU" finché il LED si accenda (circa 3 secondi).
- 2) Premere la sequenza di tasti numerici "9-9-9-0". Il LED resterà acceso.
- 3) Premere il tasto che si desidera eliminare. Il LED lampeggerà due volte a conferma e si accenderà nuovamente.
- 4) Ripetere il punto 3 per ogni altra funzione da rimuovere.
- 5) Per uscire dalla modalità di eliminazione, premere "TV" o "SAT".

Eliminare tutti i tasti memorizzati su uno dei banchi di memoria:

- 1) Tenere premuti il tasto del banco di memoria ("TV" o "SAT") e "MENU" finché il LED si accenda (circa 3 secondi).
- 2) Premere la sequenza di tasti numerici "9-9-9-1". Il LED lampeggerà lentamente due volte per confermare l'avvenuta eliminazione.

Eliminare tutti i tasti memorizzati su tutti i banchi di memoria:

- 1) Tenere premuti il tasto di un banco di memoria ("TV" o "SAT") e "MENU" finché il LED si accenda (circa 3 secondi).
- 2) Premere la sequenza di tasti numerici "9-9-9-5". Il LED lampeggerà lentamente due volte per confermare l'avvenuta eliminazione.

RIPRISTINARE LE IMPOSTAZIONI DI FABBRICA:

- 1) Tenere premuti il tasto di un banco di memoria ("TV" o "SAT") e "MENU" finché il LED si accenda (circa 3 secondi).
- 2) Premere la sequenza di tasti numerici **"9-3-0-0"**. Il LED lampeggerà rapidamente 3 volte per confermare il ripristino.

EN

Suggested codes for the most popular TV brands:

HISENSE	LG	PANASONIC	PHILIPS (Code A)	PHILIPS (Code B)	SAMSUNG	SONY	TELEFUNKEN / VESTEL
4291	4231	4281	4261	4271	4241	4251	4261

RAPID SEARCH BY BRAND:

	1	2	3	4	5	6	7	8	9	0
TV	Hitachi	JVC	LG	Panasonic	Philips	Pioneer	Samsung	Sharp	Sony	Toshiba
SAT	CanalSat	Digital	Foxtel	Humax	MultiChoice	Philips	Pioneer	SKY	TechniSat	Sky Deutschland

- 1) Position the remote control in front of the device to be controlled, making sure that the device is turned on.
- 2) Hold down the key for the memory bank ("TV" or "SAT") and the "MENU" key, until the LED goes on (approximately 3 seconds).
- 3) Press this sequence of numbered keys: "9-9-8- (0-9) " (the last figure should be selected from the table at the start, based on the device and the brand being searched for).
A series of signals will be sent out to turn the device off, each separated by a single blink of the LED.
- 4) When the device does turn itself off, push the "OK" key to confirm the code and stop the search.
- 5) Make sure that the remote control is operating properly, otherwise repeat the procedure starting from step 2.

RAPID SEARCH:

Before proceeding with the first step, find the programming code for your device from the list at the end of this manual.

- 1) Position the remote control in front of the device to be controlled, making sure that the device is turned on.
- 2) Hold down the key for the memory bank ("TV" or "SAT") and the "MENU" key, until the LED goes on (approximately 3 seconds), in order to activate the mode for entering codes.
- 3) Enter the 4-digit code selected.
- 4) The LED will turn itself off, confirming that the code has been programmed. If the procedure has not been successful, then the LED will give 2 short blinks and stay on.
In this case repeat the operation, starting from step 3.
- 5) Make sure that the remote control is operating properly, otherwise repeat the procedure starting from point 3 and using a different code.

NOTE: If no key is pressed, then the remote control will automatically exit the programming mode after approximately 15 seconds.

AUTOMATIC SEARCH:

ATTENTION: To be carried out only if the proper code cannot be found using the two types of rapid search.

- 1) Position the remote control in front of the device to be controlled, making sure that the device is turned on.
- 2) Hold down the key for the memory bank ("TV" or "SAT") and the "MENU" key, until the LED lights up (approximately 3 seconds).
- 3) Press the on/off key, in order to start the automatic search for the code.
A series of signals to turn the device off, each separated by two blinks of the LED, will be sent out.
NOTE: To return to a previous code, the direction of the search can be changed by pressing the "CH<" key.
To continue moving forward again, press the "CH>" key.
- 4) When the device turns itself off, press the "OK" key to confirm the code and stop the search.
- 5) Make sure that the remote control is operating properly, otherwise repeat the procedure from point 2.

VISUALISATION OF THE CODE IN USE:

- 1) Select the memory bank whose code in use you wish to know ("TV" or "SAT").
- 2) Press the combinations of buttons shown below to find out each of the 4 digits that compose the whole code (we suggest to take note of each digit at the end of every step):
NOTE: The "0" digit will be displayed as a very quick sequence of flashes.

- | | | |
|---------------------|---|---|
| a. "▶ (PLAY)" + "1" | → | The number of flashes of the LED shows the 1 st digit of the code. |
| b. "▶ (PLAY)" + "2" | → | The number of flashes of the LED shows the 2 nd digit of the code. |
| c. "▶ (PLAY)" + "3" | → | The number of flashes of the LED shows the 3 rd digit of the code. |
| d. "▶ (PLAY)" + "4" | → | The number of flashes of the LED shows the 4 th digit of the code. |

SHARING OF THE "VOLUME" KEYS ("VOL-/VOL+/MUTE"):

This function makes it possible to share the "VOL-/VOL+/MUTE" keys of the "TV" memory bank with the "SAT" memory bank by superimposing the "TV" volume keys on the "SAT" ones.

In this way, the "VOLUME" keys of the TV can be adjusted even when the "SAT" code has been selected.

- 1) Hold the "SAT" and "MENU" keys down, until the LED goes on (approximately 3 seconds).
- 2) Press the sequence of numbered keys "9-1-0-0". The LED will blink twice for confirmation, and stay lit.
- 3) Press the "TV" key. The LED will blink twice and turn itself off, confirming completion of the procedure.

To interrupt the sharing of the "VOLUME" keys:

- 1) Hold the "SAT" and "MENU" keys down, until the LED turns on (approximately 3 seconds).
- 2) Press the sequence of numbered keys "9-1-1-0". The LED will blink twice and turn itself off, confirming completion of the procedure.

LOCKING THE CODE:

To keep the programmed code from being modified, select the memory bank desired ("TV" or "SAT") and press down the "OK" key for approximately 7 seconds. The LED will blink twice and turn itself off, confirming completion of the procedure.

To unlock the code:

Select the memory bank desired ("TV" or "SAT") and press down the "INFO" key for approximately 7 seconds. The LED will blink three times and turn itself off, confirming completion of the procedure.

SELF-LEARNING FUNCTION:

- 1) Position the original remote control at a distance of 3-5 cm from the Superior "Safe" model, with the infrared LEDs of the two remote controls facing each other.
- 2) Select the memory bank ("TV" or "SAT") on which the function is to be used. Hold down the hidden key found above "INFO", until the LED goes on (approximately 3 seconds), in order to activate the self-learning mode.
- 3) Press the key of the original remote control that is to be copied. The LED of the Superior "Safe" model will begin to blink slowly.
- 4) Press the key of the Superior "Safe" remote control on which the key of the original remote control is to be memorised. The LED of the Superior "Safe" model will go on again, confirming the operation.
- 5) Repeat steps 3-4 for any additional keys to be copied.
NOTE: If necessary, any key that has been copied can be memorised over again.
- 6) Press the hidden key once again to exit the self-learning mode.

NOTE: If the LED of the Superior "Safe" remote control should blink twice during the learning procedure and unexpectedly exit the mode, there may be a problem of memory or compatibility with the original remote control.

It may be necessary to cancel some of the keys memorised on one of the two memory banks ("TV" or "SAT") in order to continue.

Cancelling a memorised key:

- 1) Hold down the key of the memory bank ("TV" or "SAT") and the "MENU" key, until the LED goes on (approximately 3 seconds).
- 2) Press the sequence of numbered keys "9-9-9-0". The LED will stay on.
- 3) Press the key that is to be cancelled. The LED will blink twice, confirming the operation, and then go back on again.
- 4) Repeat step 3 for any other function to be removed.
- 5) To exit the cancellation mode, press "TV" or "SAT".

Cancelling all of the keys memorised on one of the memory banks:

- 1) Hold down the key of the memory bank ("TV" or "SAT") and the "MENU" key, until the LED goes on (approximately 3 seconds).
- 2) Press the sequence of numbered keys "9-9-9-1". The LED will blink twice, slowly, to confirm the cancellation.

Cancelling all of the keys memorised on all the memory banks:

- 1) Hold down the key of a memory bank ("TV" or "SAT") and the "MENU" key until the LED turns on (approximately 3 seconds).
- 2) Press the sequence of numbered keys "9-9-9-5". The LED will slowly blink twice to confirm the cancellation.

RESTORING THE FACTORY SETTINGS:

- 1) Hold down the key of a memory bank ("TV" or "SAT") and the "MENU" key, until the LED goes on (approximately 3 seconds).
- 2) Press the sequence of numbered keys **"9-3-0-0"**. The LED will give 3 rapid blinks to confirm the reset operation.

EN – TV CODES LIST

EN – Suggested codes for the most popular TV brands:

HISENSE	LG	PANASONIC	PHILIPS (Code A)	PHILIPS (Code B)	SAMSUNG	SONY	TELEFUNKEN / VESTEL
4291	4231	4281	4261	4271	4241	4251	4261

888	0471 0701 0421		0121 1521 0231 0701 1421
A.R. Systems	0061 0601 2881 0661 0751		1351 1611 1341 0991 0911
	0161 0521		0771 3121 0081 1091 2051
Accent	0021 0061 2881 0161 0521		0471 0281 0651 1031 2001
Acer	2961 3281		2581 0761 1151 2421 2271
Acentic	0521		2601 2161 2541 0381 0521
Acoustic Solutions	3561 3741 2591 3971 2571		0161 1541 1461 1671 0421
	3421 3811 1831 4091 1921		0221 0591 1831 2011 3741
Acoustic arch	2911		2131 3811 4091 4161 1921
Acura	0021		2571 3511
Adcom	1061 0831	Akashi	2151 0021
Addison	1181 0201 0684	Akiba	0351 0481 0751 0061 2881
ADL	2181		0161 0521
Admiral	0171 0231 1191 0821 0471	Akira	0821 3941 0161
	0421	Akito	0061 2881 0161 0521
Advent	1901	Akura	0061 0351 0471 2881 1271
Adyson	0081 2051		0701 0021 0481 1351 2621
AEA	0061 2881 0161 0521		3751 1541 0421 3681 3561
AEG	2501 1031 1951 0591 2631		1831 0161 3461 0521 1401
	1831 2141 1921 3931 3921		34213821 2231 3931 3871
	3941	Alaron	2051
Aftron	3861	Alba	0021 0061 2001 2881 0051
Agashi	2051 0471 0081 0421		1351 0351 0821 1371 0641
AGB	1611		1271 0621 2051 0431 0231
Agfaphoto	4111 3931		0811 2581 0731 2601 1831
Agora	3971 3421 4091 0161		3421 1541 0161 0521 4161
Aiko	0021 0061 2881 2051 0641		4091 1401 3811 1921 4151
	0041 0711 0121 0311 0291		4071
	0471 0081 0161 0521 0421	Alfide	1241
Aim	0061 0121 0701 2881 1521	Alkos	0041
	0341 1651 1701 1301 0161	Alios	3991
	0521 0381 1461 1071 0591	Allure	4101
Airis	3221 0521	All-Tel	1881
Aiwa	0981 2341 2581 2401 4071	Allorgan	0081
Akai	0021 0311 0341 2881 0061	Allstar	0061 2881 0161 0521
	0641 2741 2431 0711 1481	Ambassador	0271
	0291 0041 0351 1241 2641	Amplivision	0081 1371 0531

Amitech	3801		1671 3871 0421 3821
Amstrad	0021 0271 0061 1611 0471	Audioton	0081 1221 1371 0471 0421
	0671 0641 0351 0701 0711	Audioworld	1301 1461
	2881 2001 1151 2621 0161	Aumark	0101
	0421 0521 1831 2141	Autovox	0081 0431 4091
Anam	0061 2881 0021 1161 1871	AVP	2581
	0161 0521	AWA	0021 0031 0051 0661 0701
Anam National	0061 2881 1161 0161 0521		0061 2881 2051 1031 0081
Andersson	1951 2041 4091 1921 3421		0201 0471 3021 3941 0161
	0161		0221 0521 0591 0421
Anglo	0021 0471 0421	Axxent	0021
Anitech	0021 0471 0061 2881 0481	Axxon	1351 1541
	0191 0421 0161 0521	Azuki	3931
Ansonic	1371 0061 2881 0021 1271	B&D	2181 2141 3901 3931
	0661 0231 0191 0891 0461	Baier	1901
	0431 2381 1621 0161 4121	Baihe	0021 0471 0701 0421
	0521 1401	Baile	0001 0021 0661 1211
AOC	0021 0101 0171 0201 0281	Baird	0211 2651 0301 0121 0131
	3431 0831 0221		0081 0341 2091 0381 0591
Aolingpike	0471 0701 0421	Bang & Olufsen	0951
Apollo	0761	BaoHuaShi	0471 0701 0421
Arcelik	1541 3891 0161 2131	Baosheng	0021
Arc en Ciel	0211	Barco	0231
Arcam	2051 0081	Basic Line	0021 0661 0061 0351 0231
Arctic	3511		1271 2881 0481 0081 0751
Ardem	1221 1351 0061 1101 2881		0571 2001 0161 1921 1401
	1541 0161 0521 1671		0521 1831
Arena	0161	Bastide	0081
Aristona	2881 0061 0521 0161	Bauer	1701 0021 3921 1461 0421
Arthur Martin	0231	Bauhn	4031
ART	1831	Baur	0021 0061 0311 0791 0881
Art Mito	3421 3561		0011 2881 0291 2401 0161
ASA	1621 0181 0581 0111		0521 4071
Asambal	2721	Bazin	0081
Asberg	0061 2881 0191 0161 0521	BBK	2571 3461
Asora	0021	Beaumark	0281 0221
Astra	0061 2881 0161 0521	Beijing	0001 0021 0341 0371 0471
Asuka	0351 0081 2051 0471 0481		0661 0701 0801 1211 1741
	0421		0381 0421
Asus	4191	Beko	1371 1351 0041 1221 1341
ATD	1301 1461		0061 0821 2001 2881 1031
Atlantic	0061 2881 2051 0531 0461		1821 1541 1671 0161 3971
	0161 0521		2131 0521 0591 3511 3891
Atori	0021	Belson	2071 2711 1461 3941 3851
Auchan	0231		4101 4131 4181 3561
Audiosonic	0021 0061 0661 1721 0211	Bennett	2881 0061 0521 0161
	2881 1351 1341 0081 1371	Belstar	1831
	0561 0471 0351 1221 2191	BenQ	2511 2571
	0161 1811 0521 2131 1541	Beon	0061 2881 0821 0161 0521

Bensten	2161 2541	Brinkmann	0061 2881 1271 2661 0821
Berthen	1271 1401 0521		1221 0161 0521 1401
Best	0561 1371	Brionvega	0061 0671 2881 0161 0521
Bestar	0061 2881 1371 0661 0161	Britannia	2051 0081
	0521	Brother	0471 0421
Bestar-Daewoo	0661	Bruns	1221
Bestwell	2161	BSR	0231 0311
Bexa	4061	BTC	0351
Binatone	0081	Bush	0021 1001 0051 2001 0061
Black Diamond	1001 1721 2001 2881 1741		1201 3231 0351 1351 0481
	1521 1951 1811 1831 0521		1271 0621 0231 0641 0661
	1921		2661 1301 1191 0471 0311
Black Panther	0191		0811 0341 0081 2501 2881
Black Star	0431		2521 2581 1591 2421 2271
Black Strip	0041		2341 3401 831 3851 4151
Blackway	0481 0351		4221 2161 0161 3421 3891
Blaupunkt	0011 0291 0881 0551 0401		1541 2631 1401 3511 3561
	0331 0751 0261 0051 3681		0421 0381 1461 0521 2011
	3881 4021		3581 2131 3821 3941 3871
			4111 3931 3811 4091 3711
Blauren	3961		4081
Blu:sens	3801 3941 4051 4101	Caihong	0021
Blue Sky	0061 0351 2881 1271 1351	Caishi	1971
	2001 0811 1341 2411 0481	Cameron	2571 0521
	0751 2581 2071 1821 2971	Camper	0161 0521
	0161 0521 1831 2141 1401	Canton	0351
	1541 3681 1671 0831 3511	Capsonic	0471 0421
	2231	Carad	1011 0061 2881 1271 2001
Blue Star	0481		0161 0521 1401 1831
BlueDiamond	3881 4021	Carena	0751 0061 2881 0161 0521
Bluetech	4071 4121	Carrefour	0051 0111 0061 2881 0161
Blush	3681		0521
Boca	3511	Carver	0261
bogo	4071	Cascade	0021 0061 2881 0161 0521
Boman	2141	Casio	0061 2881 0231 0161 0521
Bork	2231	CAT	3581
Bondstec	0431	Cathay	0061 2881 0161 3741 0521
Boots	0081 0021	CCE	0061 0081 2881 2641 0161
Bosch	0531 0401		0521
BPL	0061 0481 3111 2881 2721	CE	2721
	2841 0341 2551 2811 2691	Celcus	1921 3561 3421 0161 1831
	2791 3131 3391 3251 3101		4091
	0161 0521 0381	Celebrity	4071
Brandt	0211 1061 0441 0491 2651	Celestial	1711 1721 1741 2681 1811
	0961 2981	Centrex	1631 1971
Brandt Electricque	0491 0441	Centrum	2001
Brand Unknown	3921	Centurion	0061 2881
Brandt	0831 3421	Century	0431
Brimax	3681	Cello	3751 3951 4081

CGE	0141 0251 0431 0821 1371 0231	Conrowa	0021 0471 0701 1301 1521 2031 0421
Centrum	1831	Contec	0021 2051 0051 0031 0471
Centurion	0161 0521		0061 2881 0421 0161 0521
Changcheng	0001 0021 0471 0661 0701 1211	Continental Edison	0211 0491 0811 3941
		Cosmel	0021 0561 0061 2881 0161 0521
Changfei	0021 2641 0661 0421		
Changfeng	0471 0701 1521 0421	CPTEC	0831 2231
Changhai	0021 2641	Crosley	0141 0431 0251 0231
Changhong	2681 1721 0021 0471 0871 1741 4211 1811 0421 0511	Crown	0021 1331 0061 1371 1221 2881 0821 0811 1351 1031 1241 1341 0341 1181 0571 2001 0161 0521 1541 0591 1671 0381 0684 1831 3511 1401
Chengdu	0021		
Ching Tai	0021		
Chimei	3521 4071		
CHL	4161		
Chun Yun	0021 4071	Crown Mustang	1241
Chunfeng	0021 0471 0421	CS Electronics	2051 0351 0431
Chung Hsin	0201 0051 0684	CTC	0431
ChungFeng	0701	CTX	2511
Chunsun	0021	Curtis Mathes	0101 0171 0241
Cimline	0021 0351	CWR-Tech	2141
Cinema	1241	Cybertron	0351
Cinex	1151 2501 3921 2631	Cytronix	2321 3561
Citizen	0101	D.Boss	0161
Clarity	3711	D-Vision	0061 2621 2881
City	0021	Daewoo	1111 1211 0661 2411 0861 0061 2881 0021 2051 0351 0081 1891 0281 0261 2531 2581 1931 0201 2931 3361 1901 1881 1241 1071 3801 3891 3951 0161 0521 0221 1541 1461 3961 3861
Clarivox	0061 0821 2881 0111 0191 0161 0521		
Clatronic	0061 0431 1371 0641 1351 0351 0471 2881 0081 0021 0191 0531 1151 1031 1951 0161 1541 0421 0521 0591 2141 1921	Dainichi	0351 2051
Clayton	2001 1831	Daitsu	2891
CMS	2051	Danichi	0351
CMX	4121 4131 4181 4161	Dansai	0061 2881 0471 0041 2051 0021 0051 0081 0341 0161 0521 0421 0381
CMS hightec	0081		
Cobolt	1971		
Combitech	2581	Dansette	0701
Concorde	0021	Dantax	1371 1221 1351 1031 1341 2581 3511 1541 1831 0591 1671
Condor	0531 0061 1371 2881 2051 0021 0481 0191 0431 0821 0891 0231 0471 0161 0521 0421	Datron	0831
		Datsura	0341 0381
Conia	1531 1741 2711 1721 3461 3851 1811 2571 4011	Dawa	0021 0061 2881 0161 0521
		Daytek	1301 2101 1651 3021 1241 3011 1461 0421
Conrac	1821		
Conrad	0061 2881 0161 0521	Dayton	0021 2101 3011

Daytron	0021 0661 0061 2881 0161 0521	Domeos	1271 1401 0161 1831
Dayu	0661 1211	Domland	0691
de Graaf	0341 0071 0911 0231 1191 0381	Dongda	0021
DEC	1661 2151 1971 2161	Donghai	0021
Decca	0061 0121 1611 2881 0081 1891 1051 2581 0161 0521	Dream Vision	2481
Deitron	0061 2881 0661 0351 0161 0521	DSE	1941 1871 2501 1721 2631 1811 1461 3581 3941 3851 2161 4181 3421 4091 2141 1541 3921
Dell	2281	DTS	0021
Denko	0471 0421	Dual	2661 0081 2651 0061 2881 0461 0601 0691 0231 1891 1091 2041 2001 0161 0521 1831 3851 3941 1921 3561
Denver	0061 2881 1031 2061 1281 0161 0521 0591 3801 3931 2141 3681 3921 4161 3751 4051	Dual Tec	0081
DER	0301	Dumont	0111 1621 0191 0081 0121
Dew	3751	Dunai	0231
DGM	3931 3871	Dunlop	4121
DGTEC	4101	Durabrand	0061 0281 2381 2881 0161 0221 0521 3511 1831 1541
Desmet	0531 0061 2881 0021 0161 0521	Dux	0061 2881 0161 0521
Diamant	0061 2881 0161 0521	D-Vision	0161 3921 0521
Diamond	0471 1301 0021 1731 2051 0641 2151 1721 0421 1811 1461	DVX	1971 0161 0521
DiBoss	0161 0521	Dynatron	0061 2881
Dick-SmithElectronics	2161 3941 4181	Dyon	4121 3941
Digatron	0061 2881 0161 0521	E.S.C.	0161 0521
Digihome	2041 3561 4091 1921	e:max	1031
Digiline	0061 2881 0181 1271 0161 0521 1401	Easy Living	2271 2421
DigiLogic	0061 2881 0161 0521	Easy Touch	2011 3681 2131 2631 3521
Digimate	3931	Ecco	1581 1651 1461
Digitek	3681	ECE	0061 2881 0161 0521
Digitex	1721 1811	ECG	3921 4161 3931 3901 3891 0161 1831
Digitor	0061 2881 1941 1871 0161 0521 1461	Edison-Minerva	0811
Digivision	0311	Elbe	0461 0721 0671 1371 0231 0061 2881 0351 0291 0891 1011 0081 1611 0311 2251 0161 0521
Digitrex	4161	Elbe-Sharp	1611
DigiX	1931	Elcit	0431 1611 0191 0231
DiK	0061 2881 0161 0521	Electrion	3421
Dikom	4121 4071	Electroband	4071
division	3921	Elekta	0021 0061 2881 0471 0481 0161 0521 0421
Dixi	0021 0061 2881 0431 0081 0161 0521	Elfunk	2121 2001 1831
DL	1971 1631 0061 1281 1881 0161 2231 2161	ELG	0061 2881 0161 0521
DMTECH	3411 2951 3801 3841	Elin	0061 2051 0911 2881 0181 1621 0311 0231 0021 0161 0521

Elite	0351 0061 0531 2881 0161		4151 4161 3881 4091
	0521	Fidelity	0231 2051 0791 0311 1191
Elman	0191		0061 2881 0641 0701 0301
Elonex	3761		0471 2581 0161 0521 0421
Elta	0021 0471 2051 0421	Filsai	0081
Emco	0431	Finlandia	0341 0581 0911 0311 0231
Emerson	0271 0281 1351 0431 0061		1191 0121 0491 2651 0091
	2881 0641 0111 0481 0531		0381
	0311 2411 1221 1371 0231	Finlux	0061 0181 0111 1621 0121
	0541 1271 1541 0221 0161		2881 1351 0581 0891 1611
	0521 1401		0081 0231 1341 0191 1091
Emperor	0481		0841 0771 2501 0761 0821
e-motion	3681 4021 3881		1031 1051 1821 0161 0521
Enzer	1521		1541 3421 3561 1671 2631
Erae	2991		0591 2011 4091 1921
Erres	0061 2881 0161 0521	Firstar	0021
Erisson	3581	Firstline	0021 0061 2051 2881 0081
ESC	0061 2881 0081		0661 0431 1271 0541 1351
Estèle	0231		0231 2411 0191 0891 0121
Ether	0021		0341 0311 2001 2071 1821
Etron	0001 0021 0061 2881 0231		2971 1951 2991 0161 0521
	1721 0161 0521 1811		1401 0381 1831 2231 2131
Eurofeel	0471 0081 0421	Fisher	1621 0081 0051 0341 1371
EuroLine	0061 0161		0941 0091 0311 0231 0121
Euroman	2051 0471 0061 2881 0081		0381
	1371 0421 0161 0521	Flatdisplays	2701
Europa	0061 2881 0161 0521	Flint	0061 0751 2881 1011 0121
Europhon	0061 1611 0191 0231 0081		0351 0471 0161 0521 0421
	2881 0431 2051 0161 0521	FNR	0191
Evesham	2271 2421 2011 3561	Foehn & Hirsch	0221 3791
Excel	0061 2881 0161 0521	Fonda	2831
Excello	1831	Force	2041
Expert	0461 0231	Forgestone	0301
Exquisit	0061 2881 0431 0161 0521	Formenti	0061 0231 0531 2881 1221
F&U	4091		2051 0161 0521
Fagor	0061 2881 0161 0521	Formenti-Phoenix	2051 0531
FairTec	2071	Fortress	0171
Family Life	0061 2881 0161 0521	Fraba	0061 2881 1371 0161 0521
Feilang	0021	Friac	0021 0061 2881 0191 1371
Feilu	0021		0861 1171 1011 0161 0521
Feiyan	0471 0701 0421	Frontech	0231 0431 0471 1191 0081
Feiyue	0021		0021 0421
Fenner	0661 0021	Fujimaro	1881 3461
Ferguson	0061 0131 0211 1061 0491	Fujicom	3681
	0441 2651 0961 0301 2881	Fujitsu	1261 0121 0191 1861 0081
	0041 1181 1621 0201 0311		0231 0021 0601 0061 2881
	0911 0731 2001 3211 2341		0311 0461 0161 0521
	2581 0161 0831 1831 4001	Fujitsu General	0021 0081 0231
	0521 0684 3961 3811 4021		

Fujitsu Siemens	2321 2421 2271 3001 1951 1821 3521 2011 1921		1351 2651 1271 0641 2411 0661 0471 1611 0021 0811
Funai	1271 0471 0701 04211831 3521 1401 4071 1541 3511		0041 0771 0961 0441 0351 2581 2251 1211 2521 1931
Furi	0471 0701 0421		2191 1281 3021 1071 2011
Furichi	2151		4001 3561 0161 3421 1831
Futronic	0471 1661 2151 0421		3821 0521 1541 1401 1921
Future	0061 2881 0161 0521		0421 2131 3741 3461 3581
G-Luxon	3221	Gorenje	3711 4091 2571 3681
Gaba	1831 0161	GPM	1371 3421 3561 4091
Galaxi	0191 0061 2881 0311 0231 0161 0521	Gradiente	0351
Galaxis	1371 0821 0061 0191 2881 0161 0521	Graetz	1181 0261 2731 0061 2881 0684 0161 0521
Galeria	0021		0231 1351 0311 0641 0061
Gateway	2511		0571 2881 1951 1541 0161
Garza	0521	Gran Prix	0521 1921
GBC	0231 0021 0661 0351 1191	Granada	1151 3921
GE	2651 0281 0481 0961 0491 0211 0441 1061 0221 0831		0061 0091 0121 2881 0341
Geant Casino	0231		0371 0081 0571 1611 0201
GEC	0061 0231 0311 0121 0081 1611 2881 0161 0521	Grandin	0051 0761 0441 0961 0231 1191 0361 2651 0911 0161 0521 0381
Geloso	0021 0431 1191 0231 0661		0061 0481 2881 0021 0231
General	0211 0491		1011 1351 1341 1271 0661
General Electric	2651 0491		0531 0351 0751 2001 1881
General Tehnic	0021	Gronic	2071 1931 3011 3031 0161
Genesis	0021 0061 2881 0161 0521	Grundig	3511 0521 1541 1671 1401
Genexxa	0231 0351 0061 2881 0701 0021 0161 0521		0191 0081 0231
Gericom	1881 2321 2771 2181 1931		0011 0021 0051 0061 0111
Gevalt	2991		0281 0291 0721 0731 0811
Giant	0081		0871 0881 2881 1021 1241
Gintai	1391		1281 1371 1471 1651 2191
G-Hanz	2231		2201 2251 2341 2581 2601
Godrej	3421		2651 2991 3021 3441 0511
GoGen	4091 1921 3561 0161 1831		0161 3871 4091 4181 4161
Gold	3751	Grunkel	0521 1461 1831 2131 0221
Goldfunk	1271 1401	GVA	3561 3931 3891 4071 3461
Goldhand	2051	H&B	2571
Goldline	0561	Haaz	1951 1921
GoldStar	0001 0061 0021 0281 1371 0651 0081 0431 2881 2051 0231 0311 0211 1191 1031 0071 1351 1341 0751 0161 0221 0521 0591 1541 1671	Haier	2161 3861
Gooding	0811	Haihong	1821 3841
Goodmans	1111 2421 0051 2001 2271 0061 0121 0861 0081 2881	Haiyan	1651 1461
		Halifax	1301 0471 1601 0421 1461
		Hallmark	3431 3941 0161 0511
		Hammerstein	0021
			0471 0701 0421
			0471 2051 0081 0421
			0281 0221
			0471 0101 0421

Hampton	2051 0081		1831 3561 1071 0221 4091
Hanimex	0351 2581		1921 0511 0161 0521 3971
Hankook	0281 0221	Hitachi Fujian	0201 0361 0161 0521
Hannspree	3761	Hitsu	0021 1011 0751 0351
Hanseatic	0061 0531 2881 0311 0861	HMV	0301
	2661 0231 1211 0481 0691	Höher	1351 2501 1881 1951 1541
	1111 1371 0021 0081 0651		4211 2631 1921
	1351 1821 1221 0161 0521	Home Electronics	1031 0591
	1071 1541 0831 3841	Hongmei	0021 0171 0471 0421
Hantarex	0021 1611 0061 2881 0191	Hongyan	0471 0701 0421
	2951 3141 3921 0161 0521	Hornyphon	0061 2881 0161 0521
Hantor	0061 2881 0161 0521	Hoshai	0351 0751 0481
Harsper	1881	Hua Tun	0021
Harwa	1581 2091 2301	Huafa	0021
Harwood	0021 0701 0061 2881 0811	Huanghaimei	0021
	0161 0521	Huanghe	0021
Hauppauge	0061 2881 0161 0521	Huanglong	0021
Havermy	0171	Hornyphon	0161 0521
HCM	0021 0481 0701 0061 2881	Huangshan	0021 0471 0701 0421
	0081 0351 0821 0471 0161	Huanyu	2051 0661 0471 0421
	0521 0421	Huaqiang	0471 0701 0421
Hedzon	2881 0061 0521 0161	Huari	0471 0701 0421
Hema	0081 0021	Hugoson	1961 2181 3521
Hicon	3191	Hygashi	0081 2051
Hifivox	0211	Hyper	0021 2051 0081 0431
Higashi	2051	Hypersonic	0311
Highline	0471 0061 2881 0421 0161	Hypson	0061 0471 2881 0481 1351
	0521		1341 0081 0751 2581 2001
Hikona	0351 3821		1271 1221 0161 0421 0521
Himitsu	1601		1541 1671 1831 1401
Hinari	0021 0341 0051 0061 2881	Hyundai	0061 1881 3201 2881 1651
	0351 0231 0621 0731 0811		2151 1521 2751 2241 1901
	0471 2581 0381 0161 0521		3361 2501 3301 3311 0161
	0421		0521 2161 3751 0421
Hisawa	0481 0351 0751 1011 2581	Iberia	00612881 0161 0521
	1351 1541	ICE	0081 0471 0061 0641 0021
HiSense	2971 0341 0021 0871 1521		2881 0351 2051 0421 0161
	1741 2031 2121 1631 2881		0521
	3121 2231 0521 0381 3861	Ices	0351 2051
	0511	Ict	0061 1891 2881 0161 0521
Hitachi	0361 2211 0021 0971 0051	Ideal	2631
	0071 0201 0761 0231 2651	i- Joy	4131 3901
	0081 0211 0321 0281 1611	Ikasu	3951
	0121 0781 0861 0061 0871	Igo	2781
	2881 0911 1191 1381 1111	IIsonic	3021
	1491 2001 1891 2031 0181	Iiyama	2181 1961
	0841 2391 0311 0791 0771	Imperial	0061 0141 0231 0431 1371
	1991 2451 2041 1911 3421		0821 0251 2881 2251 0891
			0311 0161 0511 0521 3921

Imperial Crown	0001 0021 0471 0661 0701 1211 0421		0161 0421 0521 4161 3931
Indiana	0061 2881 0161 0521	Jay-tech	4071
InFocus	2021 2771	JCB	2621
Ingelen	0231 0811 1011 1351 0311 1541	JDV	0051 1391 0021
Ingersoll	0021	Jean	0041
Ingo Devices	3931	JEC	3681
Inno Hit	0021 0121 1611 0061 2881 0351 0081 0431 0191 0481 1951 1831 0161 0521 1921 3421	JGC	0021 0471 0701 0421
Innova	0061 0161	Jialicai	0341 0371 0381
Innovation	2661 0061 2881 0161 0521	Jinfeng	0021 0471 0701 0421
Innowert	1881 2321	Jinque	0021 0471 0701 0421
Inotech	1581 1721 1811	Jinta	0021 0471 1301 1741 0421
Inspira	2141 2631	Jinxing	0161 0521
Interactive	0061 2881 0791 0401 0231 0311 1371 0211 0891 0161 0521	JMB	0061 0861 1111 0661 2881 0731 2581 0161 1071 0521 4091
Interbuy	0021 0061 0471 0431 0791 2881 0161 0421 0521	JNC	3411 1901
Interfunk	0061 0231 2881 0431 0311 0791 0401 1371 0211 0551 0161 0521	Jocel	1331
Internal	0061 2881 0861 0661 2411 0161 0521	Jubilee	2881 0521
International	2051	Juhua	0471 0701 0521
Intervision	0061 0481 0081 0191 0751 0471 0641 0651 2661 1221 1371 0691 0811 0351 0231 0431 0021 2881 0161 0421 0521	JVC	0051 0171 0301 0351 0641 0821 0871 1031 1161 1181 1261 1451 2731 3481 0684 4091 1921 0591 0511 4101
Irradio	0021 0061 2881 0351 0431 0641 0161 0521 1541	Kaige	0021 0471 0701 0421
IRT	1301	Kaisui	0021 0351 2051 0481 0061 0081 2881 0751 0161 0521
Isis	4091 1921 1831	Kambrook	0651 0421
Isukai	0351 0061 2881 0481 0751	Kamp	2051
ITC	0081 0531	Kanghua	2551
ITS	0061 0641 0351 0481 0471 2051 0021 2881 0161 0421 0521	Kangli	0001 0021 0471 0661 1211 0421
ITT	0231 0311 0771 0911 0761 0301 0581 0571 0341 1011 3891 0381 2571 4091 1921	Kangyi	0021 0471 0701 0421
ITT Nokia	0311 0911 0231 0761 0771 0581 0341 0571 1031 1011 1091 1191 0381 0591	Kapsch	0231 0311 0461 1621
ITV	0471 0061 2881 0431 0661	Karcher	0061 2881 1371 1011 0231 0481 0191 0471 1591 1351 2501 1031 0161 0521 0421 1541 2631 0591 3891 2131
		Kathrein	2881 0061 0521 0161
		Kawa	0641
		Kawasho	2051
		KB Aristocrat	0231
		Kendo	0061 1011 0671 2881 0231 2661 0791 1371 0651 1191 0891 0191 0431 1151 2001 2381 1221 0161 4091 0521 3421 1831 1921
		Kennedy	0231 0721
		Kenmark	4001

Kennex	2001 1831	Lenco	0061 1391 0021 0231 0661
Kenstar	3981		2881 1621 1281 2001 4121
Keymat	2161 2541		0161 0521 1831 3821
Kenwood	0181	Lenoir	0021
KIC	0081 2641	Lesa	0431
Kingsbrook	1831	Level	3991
Kingsley	2051	Levis Austria	0061 2881 0161 0521
Kiota	0001	Lexsor	2091
Kioto	2881 1651 0521 1461	Leyco	0061 0471 0121 2881 0161
Kiss	1681		0421 0521
Kiton	2881 0061 1271 0521 0161	LG	0001 0021 0061 0081 0101
	1401		0201 0211 0231 0281 0311
KLL	0061 0161		0431 0651 2881 1031 1131
Kneissel	0061 0461 1371 1011 0891		1301 1341 1351 1371 1761
	0661 0861 2881 0721 0671		1851 2051 2071 2261 2801
	2581 0161 0521		2851 2921 3081 3471 3501
Kobra	3191		3531 3591 3791 0221 0161
Kolin	0201 0051 0684		1541 0521 0591 1671 1461
Kolster	0061 2881 0191 0431 0351	Liesen & Tter	0061 0401 2881
	0161 0521	Liesenkotter	0061 0401 0331 2881
Kongque	0021 0471 0421		0161 0521
Konichi	0021	Lifetec	0061 0021 2661 0661 1271
Konka	0061 2881 0641 1351 0821		0791 1171 2001 1891 2881
	0351 1121 1281 1531 1601		0351 0471 1261 2271 2421
	2711 1661 0161 0521 1541		1351 0161 1401 1831 3841
	0591		0521 1541 0421 2011
Kontakt	0811	Lloyd's	0001 0021
Korpel	0061 2881 0161 0521	Linetech	4091 1921
Korting	1371 0531	Linsar	3421 4091 3971 3561 1921
Kosmos	0061 2881 0161 0521		1831
Kotron	0701 0471 0421	Local Calcutta TV	3171 2831 2841 2721 0381
Koyoda	0021	Local Chennai TV	0641 3171 0471 0991 3261
KTV	0081		2831 3051 3091 0021 2541
Kuaile	0021 0471 0701 0421		0421
Kuba	0231	Local Delhi TV	2741 3231 3171 3261 2831
Kuba Electronic	0231	Lodos	2001 2041 0511
Kulun	0021 0381 0421	Loewe	0791 1101 1641 0061 2881
Kunlun	0341 0371 0471 0661 1211		1171 1371 0671 1611
Kuppersbusch	4091 0161 3561	Logik	0001 0031 0101 1301 1581
Kyoshu	0701 0821 0471 0421		0021 0301 0471 0641 1931
Kyoto	0231 2051 0081		2181 2001 3811 1461 4201
L&S Electronic	1881 1351 1541		0421 3421 1831 3461 3941
LaSAT	1221 1371		0161 4151
Lavis	2001 0061 0231 1831 0161	Logix	1271 2661 1401 4021
Leader	0021	Longjiang	0471 0701 0421
Lecson	0061 2881 0161 0521	Luker	2621
Legend	0021 0561	Luma	0061 1191 0231 0891 2881
Lemair	0891		0661 0021 0671 0461 0161
			0521

Lumatron	1191 0061 2881 0671 0231 0461 0311 0081 0471 0131 0161 0521 0421	Maxdorf	1581 1461 0421
Lumenio	0161	Maxess	4061
Lux May	0061 0021 2881 0161 0521	Maxim	2621 2501 2631
Luxor	0321 1951 0311 1191 0771 0841 0341 0911 0231 0581 0761 2001 0081 1091 0381 1831 4091 3561 1921	MCE	0021
LXI	0281 0221	ME	2721
Madison	0061 2881 0161 0521	Mediator	0061 2881 0161 0521
Magnadyne	0191 0431 1611 0231	Medion	0061 1271 1351 2001 1821 2661 2881 0791 1891 1301 2581 2381 2521 2271 2421 1931 2311 2341 1401 1541 1831 0161 0521 4111 3931 1461 2011 2631 3841 3561 3971 3801 4091 1921
Magnafon	0191 1611 2051 0131	Megas	1011
Magnavox	0061 2881 0051 1651 1631 0161 0521 1461	Megatron	0281 0221
Magnum	1151 1351 0061 2881 1341 2311 1541 0161 0521 1671 2631	MEI	2001 0061 2881 1831 0161 0521
Mandor	0471 0421	Meile	0471 0701 0421
Majestic	4121	Melectronic	0021 0581 0061 0791 1621 0211 2651 0231 0431 0181 0081 0491 0661 0771 0841 2051 0891 2881 1111 0311 0291 0011 1211 1351 3401 0161 0521 1071 1541 3511
Manesth	0061 0081 2881 0471 0531 0041 0231 1191 0161 0521 0421	Memorex	0021 0281 2001 1161 0101 0221 1831
Manhattan	0061 1901 2881 1271 2001 2891 0231 1591 0161 0521 1401 1831	Memory	3821
Maqma	3681	Memphis	0561 0121 0021
Marantz	0061 2881 0701 3311 0161 0521	Mercury	0001 0061 0021 1301 0471 2881 2641 0161 0421 0521 1461
Mark	0061 2881 0081 2051 0661 0021 1351 1341 0161 0521 1541 1671	Merritt	0911 0311 0231
Master's	0861 0061	Mermaid	0161
Marks & Spencer	3951 3751 4081	Metronic	1061 0831
Mascom	2631 0521 0161 3891 3421 3921	Metz	0681 0881 0741 1511 0631 1951 0011 0291 0061 2881 1281 1271 2001 3321 1921 0161 0521 1401 1831
Masuda	0351 0641 0021 0471 0061 0081 2881 0421 0161 0521	MGA	0281 0061 2881 0351 1621 0221 0161 0521
Matsui	0021 0061 0031 2881 0041 0811 0051 0121 0271 0341 0621 0081 0641 0731 0711 1611 1191 0751 0231 0091 0011 0291 0441 1351 2581 2001 2341 1921 1831 0161 0381 0521 1541 3521 3971 3561 4091	Micromaxx	0061 2881 1271 2001 2251 1821 0161 0521 1401 1831 2141 3841 1541
Matsushita	1161	Microstar	1821
Matsuiama	1281	MicroTEK	1721 1811 1461 0421
Maxam	0471 0421	Mikomi	2041 1921 3421 3561 0161
		Minato	0061 2881 0161 0521
		Minerva	0111 0811 0881 0011 0291 1611 0201 2011

Minoka	0701 0061 2881 0161 0521	NEC	0021 0031 0051 0061 0081
Mirror	2521		0261 0281 0471 0531 0661
Mirai	3521 3491 4071		0701 0751 0861 0871 2881
Mitsai	2631		1181 1211 1281 1321 1561
Mistral Electronics	0301		2031 2481 2901 3551 4031
Ministry of Sound	3561		0221 0161 0684 0421 0521
Mitsubishi	0201 0171 0791 0061 0281		0511
	0051 0301 0881 2881 0341	Neckermann	0061 0291 1371 2881 2401
	2001 2371 0161 0221 0521		0551 0231 0401 0821 0431
	0381 1831		0081 0891 0531 1191 0791
Mitsuri General	0231		0161 0521 4071
Mivar	2051 1611 1371 1141 0081	NEI	0061 0561 2881 0641 0231
Monaco	0021		0161 0521 1831
Moree	0161	NEO	2141
Morgan's	0061 2881 0161 0521	Neovia	2771 1881 3411 3001 2991
Motorola	0171		1901 3021 3041 2951
Moserbaer	3421	Neon	3951 3751 4081
mp man	4181	Nesco	0431 2581
MTC	0101 1371 0791 0231 2051	Netsat	0061 2881 0161 0521
	0311	Network	0561
MTlogic	1351 2191 1541 2131	Neufunk	0061 0021 2881 1011 0351
Mudan	0021 0341 0371 0471 0701		0481 1351 0161 0521 1541
	0381 0421	Nevir	4121 4091
Multibroadcast	0301	New Tech	0061 0021 2881 2651 0081
Multistandard	0191		0161 0521
Multitec	0061 2881 1221 1271 2001	New World	0351
	2501 0161 0521 1401 1831	Newave	0021 1391 0281 0171 0221
	2631	Nfren	1681
Multitech	0021 0191 1191 2051 1221	Nicamagic	2051
	0061 0081 1371 2881 0431	Nikai	1921
	0471 0161 0521 0421	Nikkai	0121 0041 0351 0061 2881
Murphy	1621 2051 0121 0231 3801		2051 0081 0471 0561 0021
	4081 3951 4091 3561 1921		0051 0161 0521 0421 3561
Musikland	0061 0351 0431 2881 0161	Nikkei	1351 1541 3921
	0521	Nikko	0281 0221
Mx Onda	3821 3461	Nippon	2831
MyCom	3021 0281 0221	Nishi	0801
Myryad	2881 0061 0521 0161	Nobliko	0191 0111 2051
NAD	0241 0281 0311 0231 0221	Nogamatic	0211
Naiko	0061 2621 1031 2881 0161	Nokia	0311 0231 0761 0771 0911
	0591 0521		1031 0841 1091 0571 0341
Nakimura	0661 0061 2881 0161 0521		0661 0581 0531 1011 0211
Nanbao	0021 0471 0701 0421		0591 0381
Nansheng	0471 0701 0421	Nordic	0081
Naonis	1191 0231	Nordmende	0211 1351 1971 0491 2651
Narita	2621		0961 0011 0061 2881 0441
NAT	0371		0231 2421 2271 3981 3841
National	0371 0341 0871 0381 0511		0161 0521 2011 1541 2541
			3421 3561 1921 2131 0831

Norfolk	0231	Online	0061 0351 2881 0161 0521
Normerel	0061 2881 0161 0521	Ormond	1271 2001 0061 2881 1401
Nortek	1401		1831 0161 0521
Novak	0061 2881 0161 0521	Orsowe	1611
Novatronic	0061 0181 0661 2881 0161	Osaki	0121 0351 0081 0471 0701
	0521		0061 0661 0621 2881 0421
Novex	2571		0161 0521
Novita	3041 3421	Osio	0061 2881 0161 0521
NPG	4211	Oso	0351
NU-TEC	0751 1301 1721 0061 2881	Osume	0121 0051 0351 0061 2881
	1811 0161 0521 1461 0421		0161 0521
	4051	Otto Versand	0051 2401 0061 0081 0531
Nurnberg	0231 0311		2651 0171 0791 0881 2881
O.K.Line	1831 2141 2631		0011 0291 0311 0211 0371
Oceanic	0231 0311 0341 0761 0911		0431 0021 0481 1611 2661
	0771 0381 3841		4071 0161 0521
Odeon	0471 0421	Pace	2581
Odys	4121 4111 3931 3901 3941	Pacific	0061 2881 1891 1351 2001
OK	4211 4091 4201		0731 0161 0521 1541 1831
Okano	1371 0061 2881 0471 0121		2141
	0021 0161 0521 0421	Pael	2051
OKI	1831 3891 3561 3421 4211	Palladium	1371 0061 0821 1171 0891
	4091 2131 4141 1921		2251 1351 1891 0291 2401
Olevia	3431		0551 2881 0431 0401 0231
Olidata	3021		2661 0081 1191 0161 1541
Omega	0471 0421		4071 0521
Omni	1631 1971 1301 1461	Palsonic	0471 0701 1581 0061 1601
Onei	3561		0081 0651 0351 1301 2881
Onida	2721 0931 2781 2861 1181		0001 0821 2761 1591 2091
	0684		2301 4031 4051 0421 0161
Onimax	1541		1461 0521 2161 4011
Onix	1461	Panama	0021 0081 0471 2051 0061
Onn	3681 2631 3891 0521 3561		2881 0431 0421 0161 0521
	3751 3971	Panache	3421
Onyx	3681 3751	Panashiba	0001
Onwa	0641 0991 0351 0711 0191	Panasonic	0001 0061 0101 0201 0231
Opera	0061 2881 0161 2131 0521		0281 0311 0341 0371 0631
	1541 3421		0871 0911 2881 1161 1611
Orava	1831 1921		1841 1861 2361 2461 2551
Optimus	1161 0241		0501 0161 0521 0381 0511
Optonica	0171	Panavision	0061 0891 2881 0161 0521
Orbit	0061 2881 0161 0521	Panda	0021 0341 0371 0471 0701
ORcom	3071 3291		0871 1301 1741 0381 0421
Orion	0061 0271 0731 0621 2881		0511 1461
	2351 1351 0531 1171 0541	Papouw	0061 2881 0161 0521
	0031 1611 0021 0191 0471	Pathe Cinema	0231 2051 0531 1371
	0701 2341 2581 1931 2091	Pathe Marconi	0211
	0161 3851 1541 0521 0421	Pausa	0021
	3841 1831 4091	PEAQ	4091

Peng Sheng	1971	Prinz	0121 0311 0321
Penney	0101 0281 0221	Profex	0021 0231 0311 1191
Perdio	0531 0121 0231 0061 2051	Profi	0021
	0481 2881 0161 0521	ProLine	0061 0541 2881 1061 1111
Perfekt	0061 2881 0161 0521		2251 0891 0121 1051 3021
Philco	0251 0141 0821 0431 0061		1071 3741 1831 2591 0831
	2881 0231 1371 0281 2661		0161 0521 4091 4001
	0781 0161 0521 0221	Prosonic	0061 2881 1371 0661 0641
Philex	0301 0231		1271 1351 2051 0081
Philharmonic	0081		0161 0521 3811 1401 1541
Philips	0021 0061 0151 0551 0201		40913841 2141 3751 3881
	0281 0291 0301 0311 0331		3681 1921 0591 3921 3891
	0391 0661 2881 1021 1081		2591 3801 1671
	1391 1571 2511 2651 3271		2571 4051 3971
	3451 0921 3541 3571 0161	Protech	0021 0061 2881 0191 0081
	0521 0221 4071		0431 0471 0561 0821 1271
Phocus	2311 2191 1351 2131 1541		0481 0231 1221 2001 0161
	3511		0521 0421 1401 1831
Phoenix	0061 2881 1371 1221 0231	Proton	0001 0281 0021 1131 0221
	0121 2051 0531 0161 0521	Provision	0861 0061 2881 2001 1351
Phonola	0061 2881 0301 2051 0161		0161 0521 1831 1541 2141
	0521	Profilo	2631
Pilot	2881 0061 1331 1651 0521	Profitronic	0161 0521
	0161 1461	Proview	3461
Pioneer	1551 0031 0241 0061 0211	PVision	2071 1901 3841
	0261 0231 1251 2881 0491	Pye	0061 2881 0661 0701 0161
	2871 1371 2651 0311 1221		0521
	0791 0161 0521	Pymi	0021
Pionier	1371 1221	Q.Bell	4071
Plantron	0061 2881 0471 0021 0161	Q.Media	4121
	0521 0421	Qingdao	0341 0371 0471 0701 0381
Playsonic	1351 0061 0081 0571 1341		0421
	3401 1541 0161 1671 3511	QONIX	3901
Policom	0191 0211 0311 0231 0111	Quadro	2161 0521 0161 1921 3561
	0141 0251 0881	Quadral	0351
Polar	0161	Quasar	0431 1161 1881 0021
Polytron	0481	Quelle	0031 0061 2401 0111 0141
Poppy	0021		1621 0311 0701 0211 0881
Portland	0661 2411 4221 2571 4091		0791 0291 0051 0081 0431
	3711 3461 3891		0401 0251 0331 0181 1271
Powerpoint	0811 0061 2881 1301 2711		2881 0011 0551 0471 2001
	0161 0521 1461 3751		0581 0021 0161 4071 1401
Prandoni-Prince	0431 1611 0311 1191		0521 0421 1831
Precision	0081	Questa	0051
Premier	0021 0471 0421	R-Line	0061 2881 0231
President	2151	Radialva	0211 0351 0231 0061 2881
Prima	0021 0471 0701 2301 0421		0491 0561 0161 0521
Princess	1301 2161	Radiola	0061 2881 0081 0161 0521
Prinston	2001 1831	Radiomarelli	1611 0431 0061 2881 0161

	0521	Saba	0211 1061 0231 0491 0961
RadioShack	0061 2881 0281 0161 0521		0441 2651 1611 0311 0851
Radionette	0221		0911 1161 1351 0831 4091
	1541		1541 3431
Radiotone	0021 0061 2881 1371 0821	Saga	3921
	0701 1151 1271 0471 2001	Sagem	1011 0751 0481 1771 1041
	0161 0521 1401 0421 1831		3351
Rank	0111	Saige	0021
Rank Arena	0051 0991 1521	Saisho	0021 0031 1611 0271 0471
RBM	0111		0081 0231 1071 0421
RCA	1061 0101 0171 0281 0961	Saivod	0061 2621 2881 1951 1271
	0441 1041 2651 1251 1521		1331 2001 0161 0521 1921
	4071 0831 0221		2631 1401 1831
Realistic	0281 0221	Sakai	0231
Recor	0061 0821 2881 0161 0521	Sakyno	0751
Rectiligne	0061 2881 0161 0521	Salora	0231 0321 0311 0911 1611
Red	3851		1191 0571 0341 0771 1051
Rediffusion	0311 0911 0051 0581		0381 2631 3891 3921 3841
Red Star	0061 2881 0161 2631 0521		4091
Reflex	0061 2881 2001 1271 0161	Salsa	0441
	0521 1831 1401	Sambers	0191 1611
Relisys	1881 1901 1911 2771 2101	Sampo	0021 0051 0171 0281 1161
	2171 2321 3421 3461		1391 0221
Reoc	1351 1111 2411 1541 1071	Samsung	0021 0061 0081 0101 0121
	3921		0171 0231 0281 0341 0371
Revox	0061 2881 1371 0161 0521		0471 0801 2881 1041 1061
Rex	0231 0461 0471 1191 0891		1131 1281 1371 1741 2051
	0431 0421		2111 2221 2641 2661 2671
RFT	1371 0121 0471 0061 2881		3241 3341 3371 3771 0411
	1221 0421 0161 0521		3601 3631 3661 3691 3721
Rhapsody	2051		3831 1231 1501 1751 1801
Ricoh	0061 2881 0161 0521		0901 1311 2291 1691 0521
Rinex	1581 0821 0421 1461		0181
R-Line	0161 0521	Sandra	2051 0081
Roadstar	0021 2001 0351 0471 0821	Sanjian	0471 0701 0421
	0061 2881 1351 1271 0481	Sansui	0061 1171 1421 2881 1651
	2341 2061 2521 1831 1671		0641 1411 3051 1871 2821
	0421 0161 0521 1541 1401		0991 0751 1941 1521 2991
	1916 2161		2161 3581 3681 0521 1461
Rodex	0061 2881 0161 0521		2541 2571 0421 1541 2011
Rover	0051 1911		2631
Rolsen	0161 0521 3861 3841	Santon	0021
Rowa	0061 0471 1301 0021 0081	Sanyo	0341 2121 1391 0031 0051
	1331 2051 1281 2881 0161		0091 1371 0571 0121 2051
	0421 1461 0521		1621 0081 0941 0701 0021
Royal Lux	1371 0701 0441		0871 0231 0061 0201 2881
Royal	0591		1221 0261 1321 0381 0511
Rukopir	2881 0061 0521 0161		0161 0521 0421 1831 3561
			1921 3421 3971 4091 4031

Sanyuan	0021 0171	Shanghai	0021 0341 0371 0471 2641
Save	0061 2881 0161 0521		0701 0381 0421
Saville	2581 0161 0521	Sharp	0051 0171 0301 0331 0451
SBR	0061 2881 0301		1611 1181 1551 1951 2081
Schaub Lorenz	0311 0911 1351 1031 1221		2371 0021 1161 0551 3611
	0661 2071 3941 1541 3921		3641 4091 0684 1921
	0591 2141 2231 3561 3891	Shen Ying	0021 0421
	2131 4091 1921	Shencai	0021 0471 0701
Schneider	0061 1891 0351 0431 2881	Sheng Chai	0021
	0641 2661 1271 0691 0601	Sheng Chia	0021 0171
	0461 2651 0081 0311 2001	Shenyang	0021 0471 1521 0421
	0231 1151 1351 2411 2581	Sherwood	0021
	2621 2341 0111 0161 4091	Shinelco	3941
	3421 0521 1401 1831 1541	Shintoshi	0061 2881 0161 0521
	1916 2141	Shivaki	0061 2881 0731 0661 0281
Scotch	0281		0161 0521 0221
Schontech	1831	Show	0821 0021 0121 0421 1461
Scotch	0221		0161
Scotland	0231	Siarem	0191 1611 0231
Scott	2061 0281 0221 2571 3821	Siemens	0061 0291 0011 0881 0551
Sears	0281 0221		0401 0331 2881 0311 0161
Seaway	1111 1071		0521
Seelver	2881 2001 0061 0521 1831	Siera	0061 2881 1281 0161 0521
	0161	Siesta	1371
SEG	0051 0061 0081 2881 0471	Silva	0061 2881 2051 0311 1151
	2001 1271 2381 0811 0021		0161 0521
	0231 1111 0191 0431 0671	Silva Schneider	2501 2631 3891 3921
	2051 1951 0351 2411 1351	Silver	0051 0061 0751 0311 2881
	1831 3931 3681 0161 0421		1341 0231 0161 0521 1671
	1921 4211 0521 1401 1071	SilverCrest	2001 0061 2881 1831 0161
	3891 3901 4081 4111 2571		0521 4091
	3421	Singer	0021 2431 0061 2881 0191
SEI	0191 0271 1611 2401 0231		0431 0721 0441 0231 2631
	0061 2881 4071 0161 0521		0161 0521
Sei-Sinudyne	0191 1611 2401 0061 2881	Sinotec	1581 0591
	4071 0161 0521	Sinudyne	0191 0271 1611 0231 0311
Seitech	2181 2141		2401 0061 2881 2581 2141
Seledine	4181		4071 0161 0521 0591
Seleco	0231 0461 0671 1191 0891	Sky	0061 0481 1931 0281 2881
	0641 0051 0471 0581 0721		3071 0161 0221 0521 3681
	0421	Skymaster	0181
Sencora	0021	Skysonic	1521
Sencor	1541 4161 3931 3921	Skyworth	0061 2881 0021 0471 1301
Sentra	0041 0351 0021		1411 1521 0161 0521 0421
Sense	3801	Sliding	1881 1931 3011 3031 1681
Serino	1011 0751 2051 0171		2141
Serie Dorada	0221	SLX	1271 1401
Shancha	0471 0701 0421	Smaragd	0811
		Sogo	4161

Soemtron	1881 2321	Sungoo	2011 3861
Sogera	0531	Sunic Line	0061 2881 0161 0521
Solavox	0231 0311 0121 0911 0061 2881 0161 0521	Sunkai	0541 0621 0751 0351 1011 0061 2881 0811 1881 0161 0521
Sonawa	0351	Sunstar	0641 0061 2881 0021 0471 0161 0521 0421
Sonber	0191	Sunny	0161
Songba	0021	Sunstech	3841 4091 3941
Soniko	0061 2881 0161 0521	Sunwatt	0751
Soniq	3191 4061 4041 4171 4151	Sunwood	0061 2881 0021 0161 0521
Sonitron	0341 1371 0571 0081 0381	Superla	1611 2051 0081
Sonneclair	0061 2881 0161 0521	Supersonic	0341 2881 1301 0471 1701 0751 0381 0521 0421 0161
Sonoko	0021 0061 2881 0471 0481 0081 0161 0521 0421	SuperTech	0021 2051 0061 2881 0351 0161 0521
Sonolor	0231 0341 2401 0911 0311 0481 0381 4071	Supra	0281 0661 0021 0221 0161
Sontec	0061 2881 1371 0021 0161 0521	Supratech	4161
Sontech	3821	Susumu	0351 0441 0491
Sony	0031 0051 0061 0141 0171 0191 0261 0611 2881 1161 1791 1981 2331 2401 2471 3381 3701 3621 4071 3491	Supreme	4071
Sound & Vision	0191 0351 0661 0061 2881 0161 0521	Sutron	0021
Soundesign	0281 0221	SVA	1281 1881 0421 0381 1461
Soundwave	0061 0821 2881 0531 1341 0161 3951 0521 1671	Svasa	1701 0381 1461 0421
Sowa	0101 0371 0051 0281 0221	Swissline	0431
SOVOS	3931	Swisstec	3071 1931 3681 3761 3801 3871
Soyo	3681	Sydney	2051 0081
Soyea	1581	Synco	0051 0101 0171 0281 4071 0221
Spectra	0021	Sysline	0061 2881 0161 0521
Ssangyong	0021	Sytong	2051
Staksonic	0021	T+A	0741
Standard	0021 0061 0081 2881 0351 2001 0531 0661 0161 3851 0521 3581 1831 3681 4121	Tacico	0281 0021 0221
Starlite	0021 0231 0061 2881 0471 0701 0161 0521	Tai Yi	0021
Starion	0421	Taishan	0021 0661
Stenway	0481 0351	Tandberg	0631 0891 0211 0561 0671 0311 0231
Stern	0231 0461 1191 0471 0891 0721 0421	Tandy	0351 0121 0171 0081 0231 0431
Stevison	2621 2501 2631	Targa	2991
Strato	0061 2881 0471 0021 0161 0521 0421	Tashiko	0051 1391 0081 1161 0261 2051 0231 1191
Strong	1951 2041 2001 0061 2881 2701 1921 1831 0161 0521	Tatung	2501 0021 0051 0061 2881 0121 1611 0101 0081 0031 1051 2581 2511 2991 2421 2271 2071 3711 0161 2011 2631 0521 2141
Stylandia	0081	TCL	1411 2721 0701 1301 0831
		Tauras	1461

	3921	Telecor	0061 2881 0231 0351 0081
TCM	1351 2311 1821		0461 0691 0161 0521
Teac	0021 1301 0061 0791 0471	Telefunken	1061 0141 0961 0211 1281
	0481 2381 0701 2001 0821		0441 1301 2651 1331 0851
	2881 0751 1331 1271 0081		1721 2551 1531 3071 1631
	1651 1391 2411 0281 0261		0491 1971 0251 0131 0061
	1351 2041 2491 3461 3991		2881 1221 1351 2501 0581
	4151 0161 0421 1831 0521		1741 0831 4121 3561 3931
	1461 1401 0221 1541 2231		1811 1461 0161 0521 1541
	3751 3681 3851 3941 4101		2631 3421 3431 1921 4091
	3821	Telefuzion	0061 2881 0161 0521
TEC	0081 0431 0021 0441 0561	Telegazi	0061 0231 0461 0351 0471
	0461 0061 2881 0311 0231		2881 0161 0421 0521
	0161 0521	Telemeister	0531 0061 2881 0161 0521
Tech Line	0061 2881 1271 2381 1951	Telesonic	0061 2881 0161 0521
	0161 3421 0521 1401 1921	Telestar	0021 0061 2881 0701 0161
Technika	3881 3851 4021 3811 3991		0521 3801
	3871 3801 3561 3821 3421	Teletech	0021 0061 2881 1271 0431
	3891 3921 4151 4091 4161		0561 2001 0161 0521 1401
Tech Lux	2061		1831
Techica	0351	Teleton	0051 0081 0231 0461 1191
Technema	0531	Televideon	0531 0231 2051
Technica	2621	Television	0061 2881 0161 0521
Technics	1161	Telexa	0191
TechniSat	1171 0061 2881 0231 2891	Tempest	0021 0061 2881 0471 0161
	0161 0521		0521 0421
Technisson	1351 2311 1541 3511	Tennessee	0061 2881 0161 0521
Techno	3421 1831	Tensai	1621 0351 0531 0061 2881
Technol Ace	0421 1071		0081 0021 0181 0661 0641
Technosonic	0061 2881 0861 0831 3851		0651 0431 1341 0231 2001
	0521 2141 0161 2161 1541		0161 0521 1671 1831
Techwood	1951 1921 1831 3561 3971	Tenson	0531 0021
Techvision	3681 3851	Tesco	4021
Tecnimagen	2881 0521	Tesla	0061 1831 0161 1401 1541
Teco	0021 0051 0171 0281 0351		3511 1671 0521
	0471 1181 2571 0221 0421	Tevion	2661 2711 2271 2321 0061
	0684		2421 2881 2681 2501 1151
Tedelex	0081 1301 1031 1651 0061		1821 1271 1881 1891 1351
	0821 0021 2431 0341 1971		2001 2311 2011 0521 3461
	1281 2881		2631 1401 3561 3851 1831
Teiron	0021		3941 3991 3421 1541 3891
Tedeiex	1461 0591 0161 0381 0521		0161 3921
	3681 0421 3581	Texet	2051 0081 0351 0661 0021
Tek	1661 1811 0161	Thes	3801 4141
Teknika	0101	Texla	1631
TELE System	1901 3891 3421 1831 0161	Thomson	0061 0211 0441 0491 0531
	3941		2881 0961 1061 2051 2651
Teleavia	0211 2651 0491		3651 0831 3431 0161 0521

Thorn	0041 0201 0301 0061 0211 0121 0131 0361 0141 2651 1621 0311 2401 0251 0861 0791 0881 2881 0031 0441 0051 0091 0661 0111 0161 4071 052	Trio Tristar Triumph Tsoschi Tuntex TVE TVTEXT-95 Uher	2011 3461 0471 0351 0301 0421 0271 1611 0581 2881 0061 0521 0161 0481 0021 3931 2881 0521 0531 0061 2881 0661 0821 1221 1371 0461 0771 0161 0521
Thorn-Ferguson	1621 0201 2651 0211 0301 0311 0441 0861 0131 0041	Ultravox UMC Unic Line Uniden	0191 0661 0431 2051 0231 0061 2881 0161 0521 4021 3681 3801 3871 3881 39013991 0061 2881 0761 0751 0161 0521 3421 1831 0161 3561 1921 4091
Tiane	0171	United	1351 0061 1341 2881 2341 2581 2001 1281 2621 1541 3821 0161 1671 4121 0521 4051 1831 3941 3801 3511 4181 4211 3751 0511 2571 3891 1921 1351 0061 2881 1541 0161 0521
Tiny	2091 2301	Unitek	3681
Tiny Digital	1201	Universum	0061 0581 0141 0181 1621 0011 0471 0761 1371 0881 0311 0431 0841 0771 0551 0821 0031 0791 0051 0111 0231 2881 0891 0401 0331 2401 1271 0081 0211 0671 0561 0271 1091 0021 0251 2001 2381 0261 1951 2041 1041 0161 1831 1921 0421 1401 0521 4071
TMK	0271 0281 0221		0061 2881 0161 0521
Tobishi	0351		
Tobo	0021 0471 0701 0421		
Tokai	0121 0061 2881 0561 1271 0231 0081 0661 0021 2001 0161 0521 1401 1831		
Tokaido	2001 1831		
Tokyo	2051 0041 2641		
Tomashi	0481 0351		
Tongguang	0471 0701 0421		
Top Show	0421 1461		
Tongtel	1631 1281		
Topline	2001 1271 1831 1401		
Toshiba	0011 0021 0041 0051 0061 0081 0101 0111 0171 0191 0211 0291 0471 0701 0871 1041 1131 1161 1301 1351 1361 1441 1741 1781 1951 2021 2121 2311 2341 2441 2481 2501 2581 2601 2611 2801 3671 3731 0511 4091 1541 3561 0421 0161 2631 1831 1921 3511		
Towada	0191 0081		
Tosumi	3751		
Toyoda	0021 0641 0471 0421		
Trakton	0021 0471 0081 0421		
Trans Continens	1271 0081 2001 0061 2881 1221	Univox	0061 2881 0561 0231 0161 0521
TRANScontinents	1051 3011 3031 1881 2881 1401 1831 0521 0161	Utax V7 Videoseven	0231 2491 0281 1931 3021 2181 0221 3521 3491 4071
Transonic	0061 1301 2881 1331 0751 1281 0791 0471 0821 0021 0161 0521 0421 2231 2161 1461	Vanguard VD-Tech Venturer Venus	0161 0521 4121 4161 3741 2591 3811 4151 2161
Transtec	2051		
Triad	0061 2881 0351 0161 0521		
Trident	1611 0081		

Vestel	0061 0231 0081 2881 1271 2001 1951 0161 1831 4091 1921 3421 3561 1401 0521	Weltblick	0061 2881 0531 0081 0161 0521
Vexa	0021 0061 2881 0161 0521	Weltstar	2001 1831
Victor	1181 0051 1161 0684	Weston	0061 2881 0161 0521
Videocon	0871 3161 3151 3181 2641 3061 2741 3331 0511 3981 4181	Westwood	3421
Videologic	0351 2051	Wharfedale	0061 1871 2661 2551 2881 2501 3821 3561 2141 1461 0161 1831 1541 0521 2631
Videologique	2051 0351 0081	White Westinghouse	0061 0531 2051 2881 0561 2411 0161 0521
Videosat	0431	Windsor	1271 2001 1401 1831
VideoSystem	0061 2881 0161 0521	Wilson	0521
Videotechnic	2051 0081 0531 0661	Windstar	0481 0561
Videoton	0231	Windy Sam	2881 0521
Vidikron	0191	Wintel	1351 1541
Vidtech	0051 0281 0221	World-of-Vision	1931 1961 1881 2311 2321 1911 2181
Viewpia	1901	Worldview	0751 0091
ViewSonic	2491 2941 3431	XDome	0511
Viper	0561	X-View	2071
Visiola	2051	Xenius	1111 1211 1071
Vision	0061 0531 0471 2881 0081 0161 0421 0521 4051	Xiahua	0021 0471 0701 1301 1581 1601 0421
VisionPlus	4021 3881	Xianghai	0021 0421
Vistar	0311	Xiangyang	0471 0701 0421
Visual Innovations	3881	Xihu	0471 0701
Vivax	2161 2131 0161 3681	Xinaghai	0701 0421
Vivo	3851 4011	Xingfu	0021
Vortec	0061 2881 0161 0521	Xinghai	0471
Voxson	0231 0281 0061 2881 1191 08210221 0161 0521 3921	Xingyu	0021
VSA	2541	Xinsida	2641
VU	3861	Xiron	3821 1831
Walker	3561 3971 4091 1921 0161 1831 3421	Xlogic	1301 2151 1461
Waltham	0081 0821 0491 0061 2881 1271 0211 2001 0231 0731 0161 0521 1401 1831	Xoro	2091 2181 2141
Wards	0281 0221	Xrypton	0061 2881 0161 0521
Warumaia	0661 1211 1071	Yamaha	1161 2451
Watson	0061 2001 0531 2271 2421 2881 0231 0021 1271 0351 2661 0691 2581 2381 3021 3291 0401 0161 1831 2011 0521 1401	Yamishi	0481 0751 0351 0061 2881 0081 0161 0521
Watt Radio	0191 0231 2051	Yingge	0021
Wega	0051 0061 2881 0161 0521	Yokan	0061 2881 0161 0521
Wegavox	0021 0061 2881 0161 0521	Yoko	0061 0081 0471 2881 0351 0021 1371 0571 2051 0431 0161 0421 0521
Weipai	0021	Yonggu	0021
Welltech	1351 1541 3511	Yorx	0351
		Yousida	0021
		YU-MA-TU	0161
		Yuhang	0021
		Zanussi	1191 0081

Zenith	0281 2411 0221	Zonda	1301 1601
Zepto	3421	ZX	2581
Zenor	0571		
Zhuhai	0021 0661		

IT – LISTA CODICI SAT/DTT

EN – SAT/DTT CODES LIST

@sat	1204 0704	Armstrong	2254 0104 0234
@Sky	1314 1014	Arnion	1204 0704
Absat	1274 0344 0774	ASA	0794 0274 0374
Acoustic Solutions	2204	Asat	0104 0234
ADB	0304 2364 1454 1074 1624	ASCI	1314 0034 1014
	1384 1684 0984 2424 3484	Asda	2204
Adcom	0104 0234	ASLF	0344
AEG	3464 3524	AssCom	0444 0424
AGK	2664	Aston	2384 1084
Agora	2204	Astra	2254 0344
Airis	1524 2094 3524 3594	Astratec	2744 1934
Akai	0104 0234 3574	Astell	2074 3294
Akira	3524 3464	Astro	0064 0094 2804 2274 0314
Akura	1334		0754 0664 0674 0104 0154
Alba	2304 0344 1154 2084 2874		0194 2184 0294 0474 0504
	2204 1524 3384		0234
Allsat	0104 0544 0564 0234	Atlanta	0224 3654 3294 2094 3524
Allsonic	2274	Atevio	3554
Alltech	0344	Atlantic Telephone	1354
Allvision	0994 0654 1014	Audioline	1494 1064
Alpha	0104 0234	Auna	2424 0984
Amino	2454	Aurora	0484 0304 1354 1514 0464
Amitronica	0344	Austar	0134 1074 0304 0484 0834
Ampere	0054		0814 0464
Altech UEC	2054 2344 2064 2294	Austriasat	3414 3584 0594 0604
Amstrad	0434 2634 0824 2844 2254	Autovox	3614
	0344 0054 0754 0944 1644	Auvisio	3354 3564 3464 3524
	0584 1544 2664 3614 1794	Avan it	0274 1344
	3344	AWA	1524
AMTC	3464 3524 2094	Axil	1564 2084 2494 2094 1524
Anglo	0344		3294 3464 3684
Ankaro	2274 0344 1114	Axis	0734 2274 0524
AntSat	0544 0644	Axitronic	1334
Ansonic	3294	B.net	1584
Antiference	2204	B@ytronic	1414 0794 0274 0374
AnySat	2654	Bauckhage	1294
Apollo	2304	Balmet	0654
Apro	1584	Beko	2304
Arena	1714	Belson	3294 2664 2094
Argos	3384	Bentley Walker	0544
Arcon	0564 1114 0054 0614	Best	2274
Arion	2374	Best Buy	2094 2664 3444 3544 3294

Bestar	2254	Chesley	1704
Big Sat	1564	Chess	1314 0034 0344 2004 1014
Biostek	3464		2184 1334
Black Diamond	1154 2204	Chili	2714
Blaupunkt	0094 0194	CityCom	0834 0994 0794 2284 0404
Blu:sens	3574		0244 0614 2494 3304 0654
Blue Sky	0344		0274 0294
Blue Star	1114	Cisco	0384
Boca	0054 2254 1374 0344 0994	Clarke-Tech	3654
	3504 0654 2184 3264 3324	Clatronic	1424 3464
	3524	Clayton	1334
Boston	0054	CMX	3564
Boshmann	1344	Cobra	3354
Botech	1344	Colombia	0054
Boxer	1634 3304	Columbia	0054
Brainwave	0914 0314 2124 0294 1584	Com Hem	3304 1904 3274
Brand Unknown	3624	Comag	0054 1374 1424 0994 1874
BritishSky-			1414 0654 2184 2414 3264
Broadcasting	0434 0824 2584 2564		3324 3504 3524
Broco	0344 1544 0584	Comcor	2624
BskyB	0434 0824 2584 2564	Comcrypt	0204
BT	1194 3634	Condor	2274 2674
BT Vision	3634	Conia	2644
Bubu Sat	0344	Connexions	2274
Bulltech	3464	Conrad	2274 0054
Bush	1604 1854 2124 2044 2744	Contec	2284
	2874 2204 1334 1584 3294	Continental Edison	2644
	3524 3694 3284 0684 2014	Coship	1564 1584
	3384 3734 3664	Crown	2254 1154 2204
Canal Digital	1984 2974 0444 2784 0084	Cornwell	2034
	0574	Crypto	3594
Cablecom	0594 0604 1134	Crystal	3594
Cabovisao	0704 1344	Cryptovision	2304
Caiway	3304	CS	1344
Canal Digital	0424 3334 3414 1124 3584	Cyfra+	3394 0924 0424
	1754 0424 1014	Cyfrowy Polsat	3364 0264 0424 0924
Canal Plus	0204 2434 3434	Cyrus	0104 3594
Canal+	0444 0154 2974 0384 0424	Daeryung	0224
	2434 3434 1654 2074 0654	Daewoo	1194 0344 2744 0734 0524
	3684	DAK	2094
CanalSatellite	0444 1324 0154 2974 0424	Dalvi	2624
	2434 3434	Dantax	1334
CanalSat	2434 3434 0424	Danystar	3574
Centrex	1704	DCR	3714
CDV	2094	D-box	0764 0364 0534 0324
CGV	1424 2984 1224 2204 0654	Delta	3304
	3614 2074	Denver	3294 3464
Challenger	2034	Deltasat	0614
Cherokee	1274 0774	DGStation	2914

DGTEC	2234 2524 2554 1344	DTI Electronics	3614 3574
DickSmith		Dual	2204
Electronics	3524	Dune	2274
Dicra	3544 3464 3594	Durabrand	1154 2204 3214
Digatron	1184	DVX	2094
Digenius	0794 0164 0274 0374	Dyon	3464 3524
Digi	2184 0594 0604	Easy-One	3644
Digi1	3614	Echostar	0864 0284 0084 0444 0344
Digiality	1014 3524		1274 1624 1404 1454 2764
Digihome	2204 2014		0424 0774 0924
Digiline	3224	Edision	1344 3254
DigiLogic	2204 3214 2094 3524	Einhell	0054 2254 0344
DigiMax	3224	Elap	0344 2384 1814 0924 1284
DigiFusion	1884 2044 274 3034 1934	Elbe	1224
Diginet	1704		3294
DigiQuest	1564 1204 3234 3464 0704	Electron	1114 2034
	1344	Elisa	3314
DigiSat	0994 0654	Elless	0374
Digisky	1564	Elsat	0344
Digital	3264 3224	Elta	0104 2274 2084 3464 0234
Digital Stream	3744		1524
Digital Vision	1934	Emme Esse	2274
Digital+	2974	Emtec	1524
DigitAlb	0654	eMTech	0914
DigitalBox	1344 3594 0504 1824	Energy Sistem	2554 1344 3294
Digitel+	1524	Engel	0544 0344 1034 1584 2094
DigitSat-e	3544	EP Sat	2304
Digittrade	1524	esoSAT	3504
DigiTurk	2344 3714	Essentials	3694
Dikom	3354 3574 3544	Etisalat	3304
Dilog	1754	Eurocrypt	2304
DigitAll World	0974	EuroLine	1034
DiPro	2534 1704 1624 1454 1384	Europa	0104 0234
	3234	Europhon	0794 0054 0274 1014
DishTV	2244 1754 0704	Europsat	1284
Distratel	2684 1144	Eurosat	2254 1814 1224 1824
Distrisat	0104 0234	Eurosky	0054 0794 2254 2274 0034
Diunamai	3354		2264 0274 0374
DMT	0614	Eurostar	0404
DNA	3274 1754 3304 3114 1134	Eutelsat	0344
	0774	Eutra	0374 0274
DNT	0104 0234	Evesham	2204
Doro	1584	Evolve	2094
DRE	3404 3304	Eycos	1114
Dream Multimedia	1004 2944 1484	F&U	2664 3594
DSE	2474 3244 3294 3524	Fagor	1284
D-Smart	3194	Fastweb	2024
DStv	0304 1514 0484 0464 2294	FaVal	3674 1344
	2054 2064	Fenner	0344 2274

Ferguson	1164 2304 0334 2744 3034 0684 3424 1934 2014 2204	Golden Channel	0724
Filmnet	0204	Golden Interstar	1144
Finepass	1924 2784 1754	GoldMaster	1014 1654
Finlandia	2304	GoldStar	2284
Finlux	2304 1334 2204 0654	Goodmans	1154 2304 1914 2204 0684 3694 3284 3384 3664 3734
FinnSat	0374	Gradiente	2364
Flair Mate	0344	Gran Prix	0374
FMD	1034 1564 1424 0034	Granada	2304
Force	2834	Grandin	1334
Fortec Star	0544 0644	Grocos	2254 0924
Foxtel	0944	Grundig	0094 0434 1164 0484 0444 0194 0684 2204 3284 3384 0464 0424 1754
Foxtel	1364 0484 0354 2304 0834 0814 0804 0854 0464 3304		
FPE	2094 3524	Grunkel	3614
Fracarro	0044	H&B	1704
France Telecom	0394	Haier	3294
freebox	1664 3074	Hallo	1334
Freecom	0094 0194	Hama	1224
Freesat	3284 1634	Handan	1984 2784 3044 1754
Freesat+	3304	Hanseatic	0664 0674 0474 0504
FTEmaximal	2274 0344 1824	Hänsel & Gretel	0054
Fuba	2844 2274 0094 2284 0164 0794 2264 1034 3494 0194 0274	Hauppauge	1184 2124 1584
Fugionkyo	0044	HB	0914 1714
Fuji Onkyo	1344 3444 2414	HD-Box	3554
Funai	0014	HDT	0514 0784
Galaxis	0734 1764 0834 0444 2274 0484 0524 3304 0424 0464	HE@D	1114
Galaxy	2034	Hewlett Packard	1094
Gardiner	0404	Hills	0994 0654
Garnet	0614	Hirschmann	0734 0754 0094 0794 2394 0994 2274 0044 1414 2984 1824 0524 2184 0194 3264 0274 0654 0374
GbSAT	0914	Hitachi	1154 2304 2204
Gecco	1414	HNE	0994 0054 0654
General Instrument	0134	Homecast	0914 2154 2674 1714
General Satellite	0834 3404 3604 3304	HOT	0634 0724
GF	0564	Humax	0834 3004 1474 2134 2864 0964 2114 2744 2824
Gi	3514		
GigaTV	3464	Humax	2894 2994 0254 3304 0654 3194 3454 3634 3714 1054 1904 3114 1784 1594 3274 0054 0544 2254 0614
Globo	1034 2004 1414 2664 1494 1314 3224 3584 1334 1064 1014 2184 0374	Huth	
GMI	2254	HyperVision	2334
Go	1754	Hyundai	0514 0784 0614
GOD Digital	0104 0234	i-Box	1484
GoGen	3464	iCan	1384
Gold Box	0154 0444 0424	Icecrypt	3534 1344 3554
Gold Vision	0544 2554 1344	ID Digital	0834 3304

ID Sat	1014 1344	Kocmoc TB	1354
i-Joy	3574	Kongque	1204 0704
ILLUSION sat	1764 2554 1344	Konig	1344 1224
Image	2094	Koscom	0564 2034
Imagin	0594 0604 3554	Kosmos	2394
Imperial	1494 1314 0664 0674 2404	KPN	2074 1134 3554
	2354 1304 0104 0154 2124	Kreatel	2964
	1064 1014 0474 0504 0604	Kreiling	0314 0034 0294 1334
	0594 0844 0234 1584 1344	Kreismeyer	0094 0194
iNETBOX	1484	Kross	2644
Inno Hit	1334 3444	Krystel	2204
International	0054 2254	K-SAT	0344
Interstar	0544 0914	Kyostar	0054
Intertronic	2254	L&S Electronic	2274 0564 0054 1314 1014
Inverto	2944	Labgear	1194 3684
Inves	2094	LaSAT	2274 2254 0054 0794 0274
inVion	3294		0374 0194
Iotronic	0054	Lauson	3354
IP Vision	3314	Legend	2714
IQ	3524	Legend Digital	2714
Irradio	3614	Leiker	3444
i-SET	1224	Leiko	1334
Isis	2204	Lemon	1014
ITI Neovision	3484	Lenco	0344 2274
ITT	3294	Lennox	2274
ITT Nokia	2304 0364 0324	Lennox	1954 1284
Jadeworld	0304	Lexus	0104 0234
Jaeger	1314 1014 3504	LG	1434 0614
Jepssen	0914	Lifesat	0054 2274 0794 0564 0344
Jerrold	0134		0274
KabelBW	3304 1904 0594 0604 1064	Linsar	2204 3594 3544
Kabel Deutschland	2464 3084 3064 3054 0594	Listo	1334 3524
	0604 3304	Liwest	0594 0604
KabelNoord	3304	Lodos	1154 2204
Kamm	0344	Loewe	2254
Kamosonic	3464	Logik	1154 2204 1864 3544
Kaon	1204 0704	LogiSat	3504 3524 2184 3324
KaTelco	0734 0524	Logix	0544 0614
Kathrein	0244 1804 2704 2314 1814	Lorenzen	0794 1184 0164 0054 0274
	0314 2324 0034 0094 2284		2184
	2394 0104 0344 0404 1274	Lupus	2274
	1444 1224 0294 0194 0234	Lowry	2204
	0774	Luxor	2014 2204
Kendo	2204	Luxorit	2164
Kennex	0044	M vision	1764 2884 3224
Kentron	3614	M7	3414
Kenwood	0444 0424	Macab	0394 0444 0424
Key West	0054 2254	Madritel	0304 0984
Kiton	0034	Majestic	3464 3594 3544

Manata	0344 0054	Mood	2724
Manhattan	0644 2304 0544 3094 0704	Morgan's	2254 0104 0344 0054 1404
Maplin	2204		0234 0654 0924
Marantz	0104 0234	Motorola	0134 0714 1674 0454 1624
Marusys	3514 3724	mp man	3614
Mascom	2394 3464	Muller	2644
Maspro	0344 0094 0194	Multichoice	0014 0204 0304 1354 0484
Master's	2284		1514 0464 2294 2054 2064
Matav	0634	Murphy	2204
Matsui	0094 2744 1334 0194 934	Mx Onda	2084 1524 3574 3614
	2204 0234	Myryad	0104 0234
Maximum	0614 1314 1014 2074	Mysat	0344 3224 3464
MDS	0964	MySky Italia	3344 1644
Mediabox	0154 0444 0424	MySky-New-	
Mediacom	0884	Zealand	3184 0854
Mediamarkt	2254	N	3484
MediaSat	0154 0444 0424 2434	NC+	3394
Mediaset	3494 3474 3234 1054 3454	NEC	1964
MediaStar	0814	Neom	2094
Medion	0994 0794 0344 0564 0054	Neotion	1314 1014
	0614 1414 2004 1314 2274	Netgem	1264 0744 3314
	2804 0654 3504 0274 1334	Neuf TV	1264 0744 3754
	1014 0374 2184	Neuhaus	0344
Medison	0344	Neuling	0994 0654 3324 2184
Mega	0104 0234	Neusat	0344 1114 1294
Megasat	1344 1824 3524 0374 0274	Neveling	0164
	2204 3464	Nevir	2084 1524 3614 3574 3444
Meletronic	0404	New Line	3524 2094
Meo	3334	NextWave	0544 2034
Mercury	3674	Nikko	2254 0344 0364 0104 0324
Metronic	0344 2614 2254 1114 1144		0234
	0404 2684 0054 2474 3234	Nilox	3234
	2204 1524 2014 1344 3464	Noda Electronic	2684
	3294 2094 2074 1584	Nokia	0764 0954 0554 0364 0444
Metz	0094 0194		2174 2304 1244 1834 0534
MiCO	2874 2094		0324 0424
Micro	0344 1184 3264 3524 3504	Noos	0394 1994 0424
Micro electronic	0344 3264 3524	Nordmende	1954 2304 1284
Micro Technology	0344	Noru	3574
Micromaxx	0794 2274 0274	Not Only TV	2204 1014
Micronik	2484	Nova	0484 0464 2054 2064 2294
Microsoft	1094 0494	NPG	1344 3354
Microstar	0614 0274	NTL	2214
Microtec	0344	NTV Plus	1634
Miraclebox	3554	Numericable	3334 0424 0004
Mitsai	3464	O2	3554
Mitsubishi	2304	Oak	0014
MNet	0204 0014	Octagon	3554
Mondeal	2804	OctalTV	1184 1064

Okano	2254 2394	Pilotime	1324
OKI	1224	Pinnacle Systems	2504
Omni	2094	Pino	1314 1014
Onn	2204	Pioneer	0174 0444 0154 1234 2694
Openbox	1544 2034 3624 3554		0424
Opensat	2034	PMB	1284
Opentel	0994 1414 0654	Polytron	2284
Optex	2284 1144 0564 0034 0344	Portland	1194
	1954 0654 2094 1284 1334	Portugal Telecom	3334
Opticum	3584 3224 3504	Power Sky	1114
Optus	0134 2214 0484 0154 0444	Preisner	0054 2254 0754 2264 1374
	0854 0464 0424	Premier	0154
Orbis	1314 1414 1014 0654	Premiere	0444 0764 0364 0734 0834
Orbit	0254		2354 0674 0314 0154 2704
Orbit Showtime			0534 1904 0324 3304 0594
Network	2054 2064 0464		0504 1594 1784 0524 0294
Orbitech	0664 0674 0104 0154 2264		1124 0604
	0034 1304 0474 0594 0604	PremiumX	2544
	0504 0234 0844	Premium	1714
Orton	3584 3224	Primacom	0734 0524
P&T Luxembourg	0744 3314	Pro Basic	3154 0424 3354
P/Sat	0994 0654	ProLine	2204 1524
Pace	2304 0434 2364 2634 0824	Promax	2304
	1364 2954 0114 1274 2224	Prosat	0814
	0354 0104 0444 1464 1974	QNS	1394
	2704 2934 0854 2344 0384	Quadral	2274 1274 0774
	0584 16443394 3414 3434	Quelle	0794 0274
	1794 3144 3184 1544 3344	Radiola	0104 0234
	2294 0774 3334 0234 0424	Radix	0754 2444 2284
Pacific	2474 1154 2204	Raduga TV	3584
Packard Bell	0734 0524	RCA	1164 0684
Palcom	0794 0164 1404 1294 0274	Rebox	0914 3554
	1284 0924	Red Star	2274
Palladium	2254	Regal	1034
Panasat	0484 0464 2054 2064	RFT	0104 0234
Panasonic	0434 0694 1214 1254 1394	RiksTV	1634
	2304 3174	Rimax	3574
Panda	2304 0094 0194	Roadstar	0344 0444 0424
Patriot	0054	Ross	3374
peekTON	1564 2094 3294 3594	Rover	0344 2274
Philips	0024 0064 0094 0104 0154	Rownsonic	1814 1224
	0214 0394 0404 0444 0624	SAB	1034 2034 0704 1344
	0764 1494 2904 3164 3174	Saba	3154
	1104 2334 0394 3054 0004	Sabre	2304
	0384 2344 2434 3394 3414	Sagem	0394 1994
	0534 3184 1124 0424 0234	Sagem	0414 0764 2614 2604 2514
	1584 0194 1064 3334		0534 2434 1634 3754
Phoenix	3294 2034	Sagemcom	1634
Phonotrend	0544 0864 1614	Saivod	3294

Salora	0654
Samsung	0444 0544 0884 1014 1024 1174 1574 1844 2104 2144 2674 2814 3014 3134 0874 3344 1644 1544 0424 0264 0584 1914
Sansui	2904 1134
Sanyo	1334
SatCatcher	2034
Sat Control	1204 0704
Sat Industrie	1284
Sat Team	0344
SAT+	1404 0924
Satec	0344
Satelco	2274
Satlink	3224 1224
Satplus	0674 0504
Satstation	0644
SatyCon	1344
Schaub Lorenz	0914 2204 3294
Schneider	1034 0884 3544
Schwaiger	2284 0644 0244 1314 1564 1414 2444 0734 0054 0614 3504 1014 1344 3324 0374 0524 1064 1584 3264 3564 3524
Scientific Atlanta	0224
Scott	3464
SCS	0794 0274
Sedeia Electronique	0044 0054 1144 2004 1114
Seeltech	1334 2094
Seemann	2254
SEG	1034 2274 2004 0034 0614 3204 1334 2094 1524 2204
Serino	0284
Servimat	1954 1284
ServiSat	1034 0344
Set-One	3644 3444
SFR	3314 0744 3754
Shark	1344
Sharp	2204 2014
Sherwood	1954 1284 0924
Shinelco	3234 3574 3464
SHOI	3574
Siemens	0094 2574 1494 1314 0194 1334 1504 1014 1064 3294 1584
Sigmathek	3524 2664 3294 3464

SignalMAX	2034
Silva	0794 0274
Silva Schneider	0374
SilverCrest	1874 3564 2184 2414 3264 3324
Simz	3214
Skantin	0344
SKR	0344
SKT	1554
Sky	0434 0454 2364 0824 0334 2564 3344 1544 1644 0534 0584 1904
Sky Deutschland	0534 1904 0324 0604 3304 0594 0504 1594 1784 1124 0524 0294 0004 0844 3274
SKY Italia	2194 2634 2954 1644 3344 1794
Sky New Zealand	3184 0854
Sky XL	1414 1034
SKY+	0824 0584 1544
Skylink	3584 2074 1654 3304 1344
Skymaster	0344 1404 0864 0614 1954 2654 1314 0924 1284 1014 1224 3154 1134 3444 3564 3214
Skymax	0104 0234
Skypex	0794 0274 0374
skyplus	0994 1314 1414 2804 0654 2184 0584 1014 0374
SkySat	0344 0034
Skyvision	3504
Skyway	3554
Skyworth	1344
SL	0054 2254 2124 2184 0374 1584
SM Electronic	0344 0864 0614
Smart	0054 0794 0754 0994 0344 1424 2984 1344 0274 0654
Sogecable	0384
Sogo	2664 3544
Solomend	3624
Soniq	1814 1224
Sony	0434 1774 0144 0444 2304 0154 0424
SR	0054
Star Sat	0054
StarHub	3024 0134
Starland	0344
Stream	2194 1794

Stream System	0704
Strong	0044 0414 1384 1404 2534
	2004 2274 0484 0444 0784
	1204 1624 1454 2754 1154
	0924 3204 3234 1334 3294
	0424 2204 0704 0464 3684
	3524 2094
Sumida	2254
Sunny	1204 0704
Sunny Sound	2274
Sunsat	0344
Sunstar	2254 2274 0054 0304
Sunstech	2094 2664 3464 3294 3524
Supermax	1144
Supratech	2664 3614
Systec	0054 1314 1014
Sytech	2664 3294 3544 3594
S-ZWO	0894
Tantec	2304
Tarbs	0964
Targa	2854
Tata Sky	3124
Tatung	2304
Tboston	1564 2084 3294 1524 2664
TBS	2204
Teac	0974 0964 1264 3044 0744
	3524
Tecatel	0864
Technika	2204 1584 1334 3314
TechniSat	0664 0674 2354 2404 0154
	1304 0104 2264 1264 0034
	2304 0594 0604 0504 0474
	0844 0744 0234 3524
Technoit	3234
Technomate	1144 1944
Technosat	0884
Technosonic	2124 1584
Technotrend	1494 1064 1584
Technowelt	0054
Techsan	0544
Techwood	0034 1154 2004 2204 1334
	2014
Teco	2254
tekComm	0544 3464
Tele Danmark	2334
Tele System	1034 1404 1954 2844 1284
	0924 3474 3494 3524 2094
	3464

TeleSystem	
Electronic	1954
Tele+1	0204
Tele2	0594 0604
Teleciel	0564
TeleClub	1384
Telecom	0344
Telefonica	1454
Teleka	2254 2394 2264
Telenet	1454
Telepiu	0204
TéléSAT	3414 3334
Telestar	0664 0674 0034 0104 0154
	1034 1314 1304 2004 0474
	0504 0234 1064 1014 0844
	1334 1584 0594 0604 3374
Teletech	0034
Televes	2304 0054 0914 1204 1314
	1404 2734 2414 0704 1014
	0924
Telewire	0994 0654
Telsey	2024 3464
TelSKY	3374
Telstra	0854
Tesla	1334
Tevebox	2164
Tevel	0634
Tevion	1314 2124 0344 1404 1984
	1814 1014 1584 0924 1224
	3154
T-Home	1634 3484
Thomson	0154 0334 0344 0414 0434
	0444 0574 0724 0824 1164
	1694 1734 2304 2534 2584
	2904 0384 0684 2434 0584
	3144 1544 0424 2014
Thorn	2304
Tiny	2124 1584
Tioko	0054 2284 2254
Titan	1824 3154
Tividi	1064 1714
TivùSat	3494
T-Mobile	3414 1134 3304
TNT Pass	1224
TNT SAT	3204 1634 2074 0594 0604
	3684
Tokai	0104 0234 3574 3614
Tonbury	2654
Tonna	2304 1954 0344 1284 3324

Topfield	0884 0904 0894 1724 2794 2924 3104 2074 1134 1654 3534	Viola Digital	1584
		Vision	1334 1824
		Visionic	0044 1114
Toshiba	1534 2304 2204	VisionNet	1344
TPS	0414 1044	Visiopass	0394
Trans PX	0134	Visiosat	2734 2714 2854 0344 0034
Transact	2724		2384 1564 1344
TrekStor	3464 3524	Vistron	0374 0274
Triax	0104 0344 0444 1034 0034 1194 1164 0054 0664 0754 0974 2004 2984 2734 1654 2074 0234 0424 0684 0474 1334 1284 2414 1824	Vitecom	3354
		Vivid	0804
		Volcasat	3294
		Volia	1754
		Voo	0424
Tricolor TV	3404 3304 3604	Vtech	0404
Trio	0614	Vu+	3514 3704 3724
Tri-Vision	1054	Walker	2204
TT-micro	1494 1064	Wavelength	0994 1424 0654
Tudi	2334	Welho	3274
Turnsat	0344	Wewa	2304
TV Cabo	3144	Wharfedale	1154 2204 0234 2014 1864
TV Star	3594	Wibo	2254
TV Vlaanderen	3414 3334 0424	Winbox	2844
TVonics	1864	Winix	3234
Twinner	0054 0344 2734 1954 1284	Wisi	0094 0794 2304 0054 0194
UEC	0484 0804 1364 0464 0854		3584 0274 0374 0654 2074
UfaNet	2074	Worldsat	1624 1454 0914 2534 0034
Umax	2094		1034
Unimade	3614	XMS	0614
Unimax	1704	Xoro	2854 3594 3464 3524 3674
Unisat	2254 0104 0054 0234	Woxter	3294 2664 3524
United	1034 3294 3544 3594 1334 3234 3614	Xrypton	2274
		XSat	0344 0914 0434 1274 0774
Unitymedia	1064 3304 0594 0604 1904	Xtreme	1204 0704
Univers	1824	Xtrend	3654
Universum	0094 0794 0034 0664 0194 0274 0474 0374	Yamada	2714 2094 2664
		YES	2364
UPC	1894 3304	Yess	1704
Van Hunen	0164 0794 0274	Youview	3634
Vaova	2094	Yukai	1524
Variosat	0094 0194	Zap	3144
VEA	3294	ZapMaster	0374
Vectra	0594 0604	Zehnder	1034 0994 1314 1414 0034
Vega	2274		0614 1424 0244 0404 2494
Ventana	0104 0234		2774 2274 2284 1014 0654
Versatel	2814		12204 0374344 3674 3684
Vestel	1034 0034 2204 3714 1334		3204 1824
VH-Sat	0164 0794 0274	Zenith	0454
Viasat	1274 0554 0414 2594 0264 0774 0594 3204 0604	Zeta Technology	0104 0234
		Ziggo	1504 1124 3304

Zinwell	0834 0814 3304 3244
Zircon	3584 1344
Zodiac	2844 3354 3614
Zon	3144
Zwergnase	2254